Murphy Display & Diagnostic Module with MODBUS® Installation and Operations Manual

MDB-02107N 2017-05-25 Section 78 00-02-0517



Please read the following information before installing. A visual inspection of this product for damage during shipping is recommended before mounting. It is your responsibility to have a qualified person install this unit and make sure it conforms to NEC and local codes.

GENERAL INFORMATION



Description

The Murphy Display and Diagnostic Module or MDDM is the keystone in a line of components manufactured by Enovation Controls as part of its J1939 MurphyLink® System. The J1939 MurphyLink System has been developed to meet the needs for instrumentation and control on electronically controlled engines communicating using the SAE J1939 Controller Area Network (CAN).

The MDDM-MOD is an additional model of the MDDM series. The MDDM-MOD can translate SAE J1939 to Modbus[®]† RTU registers for remote monitoring via satellite, land lines and cell phones or other controller and computer systems. This powerful unit is an easy to use multifunction tool that enables the operator to view many different engine parameters and engine service codes.


The MDDM-MOD includes a two line by eight character backlit LCD display. The top line displays data labels, i.e., OilPress. The bottom line displays appropriate units information, i.e., 80 psi for oil pressure.

The UP and DOWN push buttons located on the front of the MDDM-MOD are used for scrolling through the parameters and viewing the menu list. Two LEDs (amber and red) are used to annunciate active fault messages received by the MDDM-MOD.

Modbus[®]† devices can be connected to the MDDM-MOD by an RS485 twisted pair cable up to 1,000 meters. The MDDM-MOD can be powered by 12 or 24* volt systems, is back lit using LEDs and is environmentally sealed.

How to Order

To order the MDDM use the model number designation diagram below:

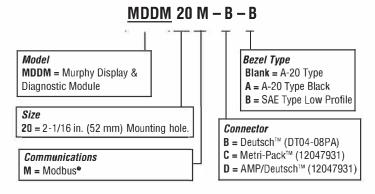



Engine Parameters

The following are typical engine parameters displayed and made available via MODBUS*† by the MDDM-MOD in English and Metric units:

- 1. Engine Hours.
- 2. Engine RPM.
- 3. System Voltage.
- 4. % Engine Load at the current RPM.
- 5. Coolant Temperature.
- 6. Oil Pressure.
- 7. Fuel Economy.
- 8. Throttle Position.
- 9. Manifold Air Temperature.
- 10. Current Fuel Consumption.
- 11. Active Service Codes.
- 12. Stored Service Codes from the engine.
- 13. Set the Units for display.
- 14. View the Engine Configuration Parameters (n/a MODBUS®†).

Specifications

Bezel: Stainless Steel (Black Optional).

Membrane Switch: Polyester.

Case/Clamp: Nickel Plated Steel, Aluminum Killed, QQ-S-698.

Maximum Panel Thickness: 0.30 inch. (8 mm). **Mounting Hole:** 2.062 inch (52 mm) in diameter.

Dial: White on Black.

Reversed Polarity: Withstands reversed battery terminal polarity indefinitely within operating temperatures.

CAN BUS: SAE J1939 Compliant.

Communication: One (1) RS485 serial port, MODBUS RTU slave, baud rate 9.6 or 19.2 kbaud, N, 8, 1 or 2, half duplex.

Operating Voltage: 8 VDC Minimum to 32 VDC Maximum.

Operating Temperature: -4 to 158°F (-20 to 70°C).

Storage Temperature: -40 to 185°F (-40 to 85°C).

- † MODBUS® is a registered trademark of AEG Schneider Automation Inc. Function code supported 03 MODBUS® 16-bit integer holding registers.
- st A voltage converter is required for 24 volts systems for the back light.

Typical Mounting Dimensions




WARNING: Disconnect negative battery cable before mounting.




IMPORTANT: The MDDM display is best viewed either straight on or at the 6 o'clock position

Panel Mounting

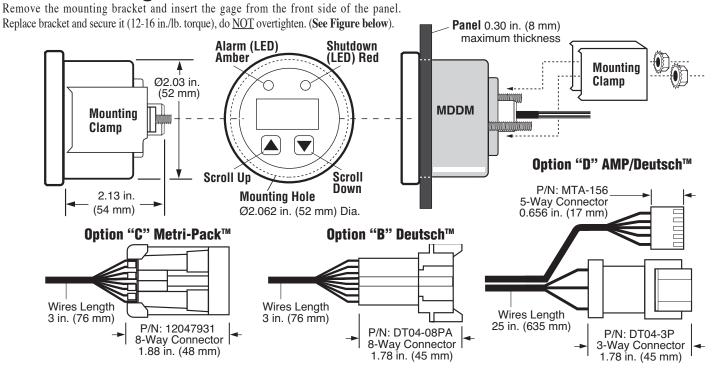

MDDM-MOD Typical Wiring Diagram

IMPORTANT: To eliminate external interference: RS485(+) and RS485(-) should be twisted pair cable or twist wires together, one twist per inch minimum. CAN_L, CAN_H and CAN Shield should be approved J1939 CAN bus cable or twist wires, one twist per inch min.

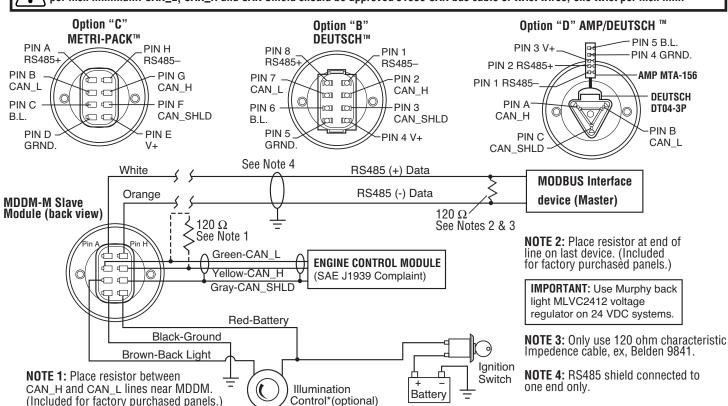

MDDM-MOD Operating Instructions

Operating Instructions


The MDDM is simple to use and allows quick and easy navigation through the menu structure to find the information needed.

The MDDM Main Menu Tree (below) first displays engine data parameters, followed by the sub-menu entry points.

NOTE: When first powered up some unused parameters may be displayed by the MDDM. These parameters will be automatically removed from the display after the initialization cycle is complete.

The following two rules are used for accessing the various items on the main menus:

- 1. To scroll through the parameter list, press either the UP or Down push buttons.
- 2. To select or exit a sub-menu <u>SIMULTANEOUSLY</u> press the UP and DOWN push buttons.

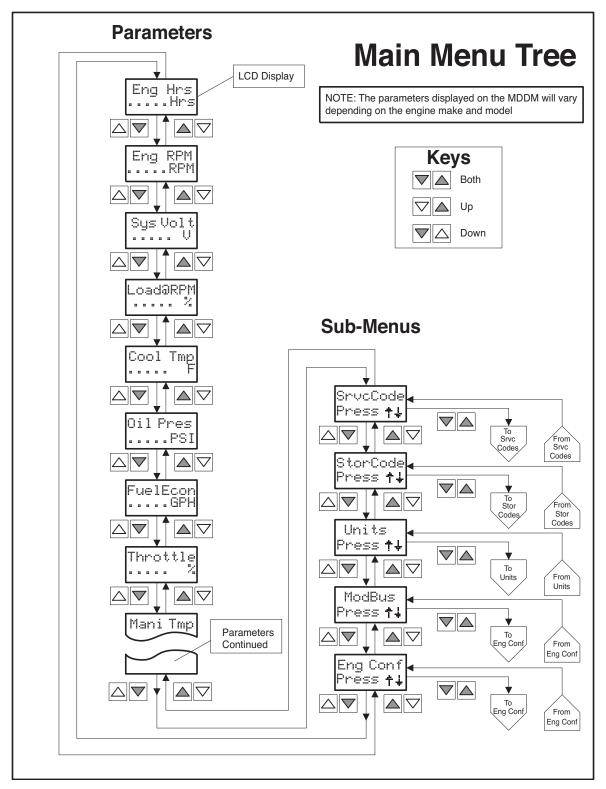

Selecting Engine Data Parameters

To read any of the engine parameters press either the UP or DOWN button until the top line of the display shows the desired information.

Selecting Sub-Menus

Press either the UP or DOWN button until the top line of the display shows the label of the desired Sub-Menu. Then press BOTH the UP and DOWN buttons <u>SIMULTANEOUSLY</u>. This action will select the Sub-Menu and the next screen on the display will list the Sub-Menu items.

Changing Units of Measure


The MDDM can display engine data in either English or Metric units. To

select English or Metric, the Units Sub-Menu must be selected. To select the Units Sub-Menu, press the UP or DOWN button until the display shows the following label:

Units Press ++

Press <u>BOTH</u> the UP and DOWN buttons <u>SIMULTANEOUSLY</u> to select the Units Sub-Menu. The Units Sub-Menu Figure (below) shows the steps for selecting the desired units of measure. Two options are available:


- 1. Press <u>BOTH</u> buttons to retain the current units designation.
- 2. Press either UP or DOWN button to toggle the units selection, then press <u>BOTH</u> buttons to select the desired unit of measure.

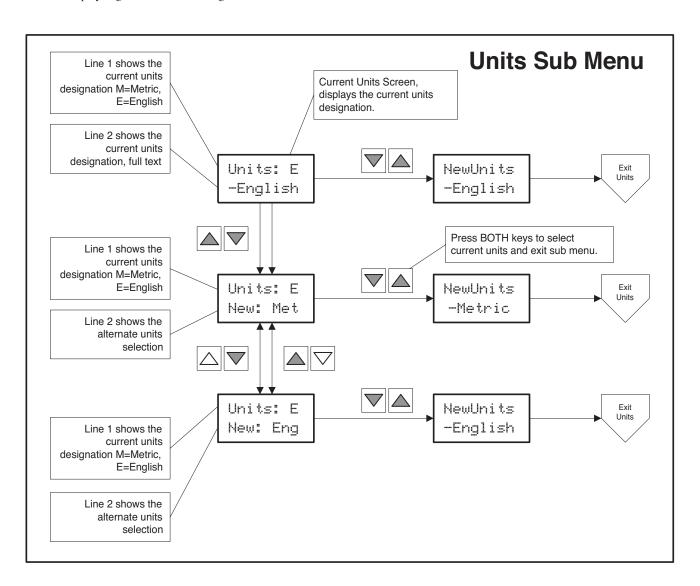

Viewing Engine Configuration Data

The MDDM can display the engine configuration data stored in the engine ECM. To select the Engine Configuration Sub-Menu (shown below), press the UP or DOWN button until the display shows the following label. Press <u>BOTH</u> the UP and DOWN buttons <u>SIMULTANEOUSLY</u> to select the Engine Configuration Sub-Menu. The MDDM will display the engine configuration data as shown in Engine Configuration Sub-Menu. If the Engine Configuration is not available, the display will show:

Eng Conf Press++

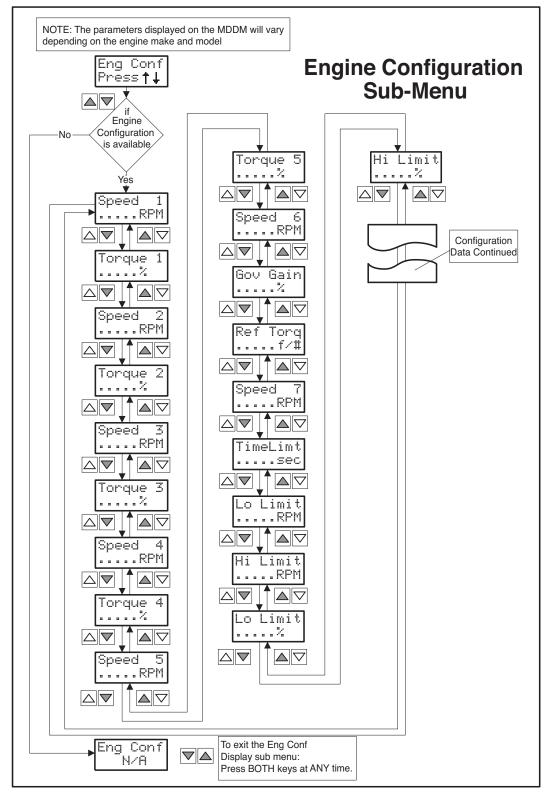


Viewing Active Engine Service Codes

The MDDM continuously monitors all messages broadcast over the SAE J1939 Control Area Network (CAN) and displays all Active Service Codes at the time the message is broadcast. When a fault occurs the display will show the message "SrvcCode" every five seconds interrupting the currently displayed parameter. In addition, the amber LED will be illuminated during Active Service Code warning faults, and the red LED will be illuminated during shutdown faults. These warnings will continue until the fault clears.

To view the Active Service Codes select the Service Code Sub-Menu by pressing the UP or DOWN button until the display shows the following label: Press both the UP and DOWN buttons <u>SIMULTANEOUSLY</u> to select the Service Code Sub-Menu. The MDDM will display all Active Service Codes as shown in the Service Codes Menu schematic (below). If Service Codes are not available, the display will show the following:

SrvcCode No Codes

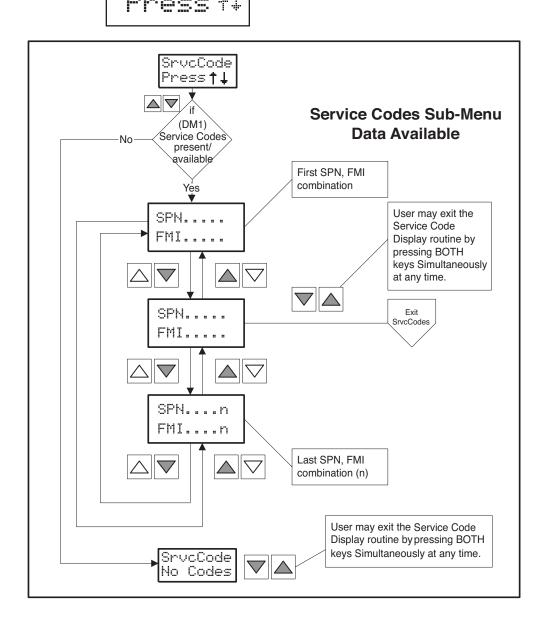

Explanation of SPN & FMI Diagnostic Codes

SPN refers to Suspect Parameter Number and FMI refers to Failure Mode Identifier. Both the SPN and FMI are used in the J1939 standard for identification of faults and conditions.


Viewing Service Codes in The Engine Control Module (ECM)

The MDDM can request Stored Service Codes (DM2) from the engine. The Stored Service Codes may be used for diagnostic and service needs. To view the Stored Service Codes it is necessary to select the StorCode Sub-Menu by pressing the UP or DOWN button until the display shows the following label.

StorCode Press++ Press both the UP and DOWN buttons <u>SIMULTANEOUSLY</u> to select the StorCodes Sub-Menu. The MDDM will display the Stored Service Codes according to the menus shown in the schematic below.

If Stored Service Codes are not available, the display will show:

StorCode No Data

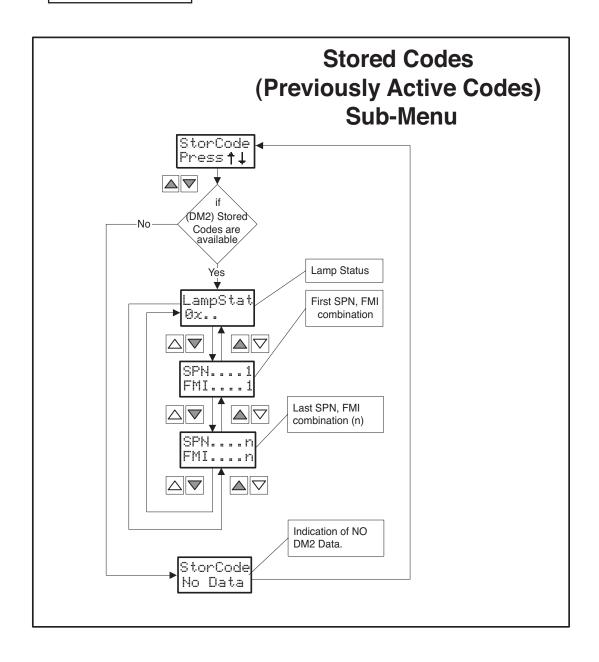

Selecting MODBUS Parameters


The MODBUS master device retrieving data from the MDDM-MOD via RS485 will require the MDDM-MOD to have a specific address, communication speed, and stop bit of 1 or 2. The MDDM-MOD address, communication speed (Baud rate), and stop bit can be adjusted through the ModBus Setup Sub-Menu.

To select the ModBus Setup Menu (shown below). Press the UP or DOWN keys until the display shows the following label:

ModBus Press ++ Press Both the UP and DOWN keys simultaneously to select the ModBus Setup Menu. This action will select the ModBus Setup Menu and the next screens on the display will list the Sub-Menu items.

The ModBus Setup Sub-Menus figure (below) shows the steps for selecting the desired units for the ModBus address, communication speed (Baud Rate), and stop bit.

- 1. Press Both keys to retain the current value.
- 2. Press either UP or DOWN keys to toggle the value selection, then press both keys to select the desired value.

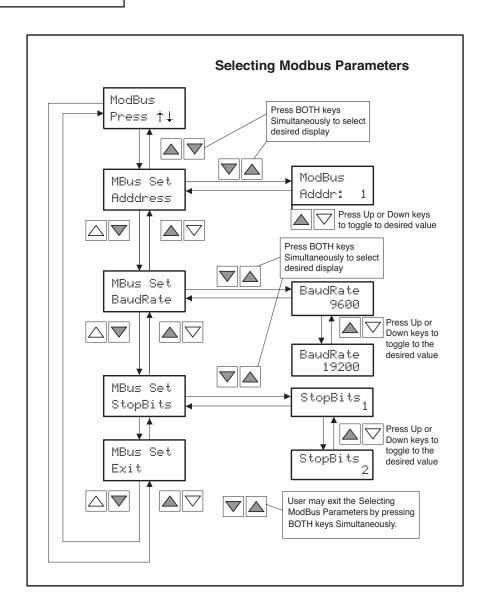

Communication Specifications:

RS485—MODBUS RTU Slave; 9600 or 19200 baud; Half-Duplex; N, 8, 1 or 2, MODBUS 16-bit integer holding registers, Function code supported 03; Maximum number of registers allowed to be polled is 100. Maximum poll rate is once every 1/2 second.

MODBUS Registers for MDDM-MOD

Register	Description	Decimal Places	Units	Range	Resolution per bit	Value for data not available
40001 40002	Percent Load at Current Speed Actual Engine Per Cent Torque	0	Per Cent Per Cent	0 - 255 -125 - 130	1 Per Cent 1 Per Cent	FFFFh, -1d 7FFFh, 32767d
40003 40004	Engine Speed Total Engine Hours Fraction	0	RPM HRS	0 - 8000 0.0 - 999.9	1 RPM 0.1 HRS	FFFFh, -1d FFFFh, -1d
40005 40006	Total Engine Thousands of Hours Electric Potential	x1000	HRS VDC	0 - 65535 0.0 - 3276.7	1000 HRS 0. 1 VDC	FFFFh, -1d FFFFh1d
40007	Battery Potential Voltage (switched)	1	VDC	0.0 - 3276.7	0.1 VDC	FFFFh, -1d
40008 40009	Engine Oil Level Coolant Level	1 1	Per Cent Per Cent	0.0 - 102.0 0.0 - 102.0	0.1 Per Cent 0.1 Per Cent	FFFFh, -1d FFFFh, -1d
40010	Fan Speed	0	Per Cent	0 - 100 0.0 - 999.9	1 Per Cent	FFFFh, -1d
40011 40012	Total Fuel Used Fraction Total Fuel Used 1000's of Liters	x1000	Liters Liters	0 - 65535	0.1 Liters 1000 Liters	FFFFh, -1d FFFFh, -1d
40013 40014	Engine Coolant Temperature Fuel Temperature	0	deg. C deg. C	-40 - 215 -40 - 215	1 deg. C 1 deg. C	7FFFh, 32767d 7FFFh, 32767d
40015	Engine Oil Temperature	0	deg. C	-273 - 2007	1 deg. C	7FFFh, 32767d
40016 40017	Engine Intercooler Temperature Fuel Delivery Pressure	0	deg. C Kpa	-40 - 215 0 - 1020	1 deg. C 1 Kpa	7FFFh, 32767d FFFFh, -1d
40018 40019	Engine Oil Pressure Coolant Pressure	0	KPa KPa	0 - 1020 0 - 2040	1 KPa 1 KPa	FFFFh, -1d FFFFh, -1d
40020	Fuel Rate	1	Liters / Hr	0.0 - 3276.7	0.1 Liters / Hr	FFFFh, -1d
40021 40022	Barometric Pressure Air Inlet Temperature	1 0	KPa deg. C	0.0 - 102.0 -40 - 215	0.1 Kpa 1 deg. C	FFFFh, -1d 7FFFh, 32767d
40023 40024	Boost Pressure	0	KPa	0 - 510 -40 - 215	1 KPa	FFFFh, -1d 7FFFh, 32767d
40025	Intake Manifold Temperature Air Filter Differential Pressure	1	deg. C KPa	0.0 - 127.5	1 deg. C 0.1 KPa	FFFFh1d
40026 40027	Exhaust Gas Temperature Transmission Oil Pressure	0	deg. C KPa	-273 - 2007 0 - 4080	1 deg. C 1 KPa	7FFFh, 32767d FFFFh, -1d
40028	Transmission Oil Temperature	0	deg. C	-273 - 2007	1 deg. C	7FFFh, 32767d
40029 40030	Injector Metering Rail 1 Pressure Injector Metering Rail 2 Pressure	2 2	Mpa Mpa	0.00 - 327.67 0.00 - 327.67	0.01 Mpa 0.01 Mpa	FFFFh, -1d FFFFh, -1d
40031 40032	Auxiliary Temperature 1 Auxiliary Pressure 1	0	deg. C KPa	-40 - 210 0 - 4000	1 deg. C 1 KPa	7FFFh, 32767d FFFFh1d
40033	Malfunction Indicator Lamp Status	0	Nα	1 = On, 0 = Off	I INI Q	FFFFh, -1d
40034 40035	Red Stop Lamp Status Amber Stop Lamp Status			1 = 0n, 0 = 0ff 1 = 0n, 0 = 0ff		FFFFh, -1d FFFFh, -1d
40036	Protect Lamp Status			1 = 0n, 0 = 0ff		FFFFh, -1d
40037 40038	Future Use Future Use					
40039 40040	Future Use Future Use					
40041	Percent Load at Current Speed	0	Per Cent	0 - 255	1 Per Cent	FFFFh, -1d
40042 40043	Actual Engine Per Cent Torque Engine Speed	0	Per Cent RPM	-125 - 130 0 - 8000	1 Per Cent 1 RPM	7FFFh, 32767d FFFFh, -1d
40044 40045	Total Engine Hours Fraction Total Engine Thousands of Hours	1	HRS HRS	0.0 - 999.9 0 - 65535	0.1 HRS 1000 HRS	FFFFh, -1d FFFFh, -1d
40046	Electric Potential	x1000	VDC	0.0 - 3276.7	0. 1 VDC	FFFFh, -1d
40047 40048	Battery Potential Voltage (switched) Engine Oil Level	1 1	VDC Per Cent	0.0 - 3276.7 0.0 - 102.0	0.1 VDC 0.1 Per Cent	FFFFh, -1d FFFFh, -1d
40049	Coolant Level	1	Per Cent	0.0 - 102.0	0.1 Per Cent	FFFFh, -1d
40050 40051	Fan Speed Total Fuel Used Fraction	0	Per Cent Gallons	0 - 100 0.0 - 999.9	1 Per Cent 0.1 Gallons	FFFFh, -1d FFFFh, -1d
40052 40053	Total Fuel Used 1000's of Gallons Engine Coolant Temperature	x1000	Gallons deg. F	0 - 65535 -40 - 419	1000 Gallons 1 deg. F	FFFFh, -1d 7FFFh, 32767d
40054	Fuel Temperature	0	deg. F	-40 - 419	1 deg. F	7FFFh, 32767d
40055 40056	Engine Oil Temperature Engine Intercooler Temperature	0	deg. F deg. F	-459 - 3645 -40 - 419	1 deg. F 1 deg. F	7FFFh, 32767d 7FFFh, 32767d
40057 40058	Fuel Delivery Pressure Engine Oil Pressure	0	PSI PSI	0 - 147 0 - 147	1 PSI 1 PSI	FFFFh, -1d FFFFh, -1d
40059	Coolant Pressure	0	PSI	0 - 295	1 PSI	FFFFh, -1d
40060 40061	Fuel Rate Barometric Pressure	1 1	Gallons / Hr PSI	0.0 - 3276.7 0.0 - 14.7	0.1 Gallons / Hr 0.1 PSI	FFFFh, -1d FFFFh, -1d
40062	Air Inlet Temperature	0	deg. F	-40 - 419	1 deg. F	7FFFh, 32767d
40063 40064	Boost Pressure Intake Manifold Temperature	0	PSI deg. F	0 - 73 -40 - 419	1 PSI 1 deg. F	FFFFh, -1d 7FFFh, 32767d
40065 40066	Air Filter Differential Pressure Exhaust Gas Temperature	1 0	PSI deg. F	0.0 - 18.5 -459 - 3645	0.1 PSI 1 deg. F	FFFFh, -1d 7FFFh, 32767d
40067	Transmission Oil Pressure	Ö	PSI	0 - 591	1 PSI	FFFFh, -1d
40068 40069	Transmission Oil Temperature Injector Metering Rail 1 Pressure	0	deg. F PSI	-459 - 3645 0 - 32767	1 deg. F 1 PSI	7FFFh, 32767d FFFFh, -1d
40070 40071	Injector Metering Rail 2 Pressure Auxiliary Temperature 1	0	PSI deg. F	0 - 32767 -40 - 410	1 PSI 1 deg. F	FFFFh, -1d 7FFFh, 32767d
40072	Auxiliary Pressure 1	0	PSI	0 - 580	1 PSI	FFFFh, -1d
40073 40074	Malfunction Indicator Lamp Status Red Stop Lamp Status			1 = 0n, 0 = 0ff 1 = 0n, 0 = 0ff		FFFFh, -1d FFFFh, -1d
40075 40076	Amber Stop Lamp Status Protect Lamp Status			1 = On, 0 = Off 1 = On, 0 = Off		FFFFh, -1d FFFFh1d
40077	Future Use			1 = UII, U = UII		111111, *IU
40078 40079	Future Use Future Use					
40080 40081	Future Use Future Use					
40082	Future Use					
40083 40084	Future Use Future Use					
40085	Future Use					
40086 40087	Future Use Future Use					
40088	Future Use					
40089 40090	Future Use Future Use					
40091 40092	Future Use Future Use					
40093	Future Use					
40094 40095	Future Use Future Use					
40096	Future Use					
40097 40098	Future Use Future Use					
40099 40100	Future Use Future Use					
- UUU	I uturo Ooo	-		1	1	

	DI	M1 Register	s (Active	e Codes)		
Register	Description	Decimal Places	Units	Range	Resolution per Bit	Value for data not available
40101 40102	Number of Sets of Active Faults Active SPN 1 (least significant word)	0 0	NA NA	0 - 24 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40103 40104	Active SPN 1 (most significant word) Active FMI 1	0	NA	0 - 31	1	FFFFh, -1d
40105	Active Occurrence Count 1	Ö	NA	0 - 127	1	FFFFh, -1d
40106 40107	Active SPN 2 (least significant word) Active SPN 2 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40108 40109	Active FMI 2 Active Occurrence Count 2	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40110 40111	Active SPN 3 (least significant word) Active SPN 3 (most significant word)	Ö	NA NA	0 - 524287	i	FFFFFFFFh, -1d
40112	Active FMI 3	0	NA	0 - 31	1	FFFFh, -1d
40113 40114	Active Occurrence Count 3 Active SPN 4 (least significant word)	0 0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40115 40116	Active SPN 4 (most significant word) Active FMI 4	0	NA	0 - 31	1	FFFFh, -1d
40117	Active Occurrence Count 4	0	NA	0 - 127	1	FFFFh, -1d
40118 40119	Active SPN 5 (least significant word) Active SPN 5 (most significant word)		NA	0 - 524287	1	FFFFFFFFh, -1d
40120 40121	Active FMI 5 Active Occurrence Count 5	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40122 40123	Active SPN 6 (least significant word) Active SPN 6 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40124	Active FMI 6	0	NA	0 - 31	1	FFFFh, -1d
40125 40126	Active Occurrence Count 6 Active SPN 7 (least significant word)	0 0	NA NA	0 - 127 0 - 524287	1 1	FFFFh, -1d FFFFFFFh, -1d
40127 40128	Active SPN 7 (most significant word) Active FMI 7	0	NA	0 - 31	1	FFFFh, -1d
40129 40130	Active Occurrence Count 7 Active SPN 8 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFFh1d
40131	Active SPN 8 (most significant word)					,
40132 40133	Active FMI 8 Active Occurrence Count 8	0	NA NA	0 - 31 0 - 127	1 1	FFFFh, -1d FFFFh, -1d
40134 40135	Active SPN 9 (least significant word) Active SPN 9 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40136 40137	Active FMI 9 Active Occurrence Count 9	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh1d
40138	Active SPN 10 (least significant word)	0	NA NA	0 - 524287	1	FFFFFFFFh, -1d
40139 40140	Active SPN 10 (most significant word) Active FMI 10	0	NA	0 - 31	1	FFFFh, -1d
40141 40142	Active Occurrence Count 10 Active SPN 11 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40143	Active SPN 11 (most significant word)	0			'	•
40144 40145	Active FMI 11 Active Occurrence Count 11	Ō	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40146 40147	Active SPN 12 (least significant word) Active SPN 12 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40148 40149	Active FMI 12 Active Occurrence Count 12	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40150	Active SPN 13 (least significant word)	Ö	NA NA	0 - 524287	1	FFFFFFFFh, -1d
40151 40152	Active SPN 13 (most significant word) Active FMI 13	0	NA	0 - 31	1	FFFFh, -1d
40153 40154	Active Occurrence Count 13 Active SPN 14 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40155 40156	Active SPN 14 (most significant word) Active FMI 14	0	NA	0 - 31	1	FFFFh, -1d
40157	Active Occurrence Count 14	0	NA	0 - 127	1	FFFFh, -1d
40158 40159	Active SPN 15 (least significant word) Active SPN 15 (most significant word)	The state of the s	NA	0 - 524287	1	FFFFFFFFh, -1d
40160 40161	Active FMI 15 Active Occurrence Count 15	0 0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40162 40163	Active SPN 16 (least significant word) Active SPN 16 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40164 40165	Active FMI 16 Active Occurrence Count 16	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40166	Active SPN 17 (least significant word)	0	NA NA	0 - 524287	1	FFFFFFFFh, -1d
40167 40168	Active SPN 17 (most significant word) Active FMI 17	0	NA	0 - 31	1	FFFFh, -1d
40169 40170	Active Occurrence Count 17 Active SPN 18 (least significant word)	0	NA NA	0 - 127 0 - 524287	1 1	FFFFh, -1d FFFFFFFh, -1d
40171 40172	Active SPN 18 (most significant word)	0	NA NA	0 - 31	1	FFFFh, -1d
40173	Active FMI 18 Active Occurrence Count 18	Ō	NA	0 - 127	1	FFFFh, -1d
40174 40175	Active SPN 19 (least significant word) Active SPN 19 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40176 40177	Active FMI 19 Active Occurrence Count 19	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40178 40179	Active SPN 20 (least significant word) Active SPN 20 (most significant word)	Ö	NA NA	0 - 524287	i	FFFFFFFFh, -1d
40180	Active FMI 20	0	NA NA	0 - 31	1	FFFFh, -1d
40181 40182	Active Occurrence Count 20 Active SPN 21 (least significant word)	0	NA NA	0 - 127 0 - 524287	1 1	FFFFh, -1d FFFFFFFh, -1d
40183 40184	Active SPN 21 (most significant word) Active FMI 21	0	NA	0 - 31	1	FFFFh, -1d
40185 40186	Active Occurrence Count 21 Active SPN 22 (least significant word)	0	NA NA	0 - 127 0 - 524287	1 1	FFFFh, -1d FFFFFFFFh, -1d
40187	Active SPN 22 (most significant word)				·	·
40188 40189	Active FMI 22 Active Occurrence Count 22	0	NA NA	0 - 31 0 - 127	1 1	FFFFh, -1d FFFFh, -1d
40190 40191	Active SPN 23 (least significant word) Active SPN 23 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40192 40193	Active FMI 23 Active Occurrence Count 23	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh1d
40194	Active SPN 24 (least significant word)	0	NA NA	0 - 127	1	FFFFFFFFh, -1d
40195 40196	Active SPN 24 (most significant word) Active FMI 24	0	NA	0 - 31	1	FFFFh, -1d
40197 40198	Active Occurrence Count 24 Future Use	0	NA	0 - 127	1	FFFFh, -1d
40199 40200	Future Use Future Use					
70200	Tuttile Ood					
			1			

DM2 Registers (Stored Codes)

Register 40201	Description Number of Sets of Stored Faults	Decimal Places	Units NA	Range 0 - 24	Resolution per Bit	Value for data not available FFFFh, -1d
40202 40203	Stored SPN 1 (least significant word) Stored SPN 1 (most significant word)	0	NA NA	0 - 524287	1	FFFFFFFFh, -1d
40204	Stored FMI 1	0	NA	0 - 31	1	FFFFh, -1d
40205 40206	Stored Occurrence Count 1 Stored SPN 2 (least significant word)	0 0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh1d
40207 40208	Stored SPN 2 (most significant word) Stored FMI 2	0	NA	0 - 31	1	FFFFh, -1d
40209	Stored Occurrence Count 2	Ō	NA	0 - 127	1	FFFFh, -1d
40210 40211	Stored SPN 3 (least significant word) Stored SPN 3 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40212	Stored FMI 3	0	NA	0 - 31	1	FFFFh, -1d
40213 40214	Stored Occurrence Count 3 Stored SPN 4 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40215 40216	Stored SPN 4 (most significant word) Stored FMI 4	0	NA	0 - 31	1	FFFFh, -1d
40217	Stored Occurrence Count 4	Ō	NA	0 - 127	1	FFFFh, -1d
40218 40219	Stored SPN 5 (least significant word) Stored SPN 5 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40220 40221	Stored FMI 5 Stored Occurrence Count 5	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40222	Stored SPN 6 (least significant word)	0	NA	0 - 524287	i	FFFFFFFFh, -1d
40223 40224	Stored SPN 6 (most significant word) Stored FMI 6	0	NA	0 - 31	1	FFFFh, -1d
40225 40226	Stored Occurrence Count 6 Stored SPN 7 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFFh, -1d FFFFFFFFh, -1d
40227 40228	Stored SPN 7 (most significant word)	0	NA	0 - 31		FFFFh, -1d
40229	Stored FMI 7 Stored Occurrence Count 7	Ō	NA	0 - 127	1	FFFFh, -1d
40230 40231	Stored SPN 8 (least significant word) Stored SPN 8 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40232	Stored FMI 8	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh1d
40233 40234	Stored Occurrence Count 8 Stored SPN 9 (least significant word)	0	NA NA	U - 127 O - 524287	1	FFFFFFFFh, -1d
40235 40236	Stored SPN 9 (most significant word) Stored FMI 9	0	NA	0 - 31	1	FFFFh, -1d
40237	Stored Occurrence Count 9	0	NA	0 - 127	1	FFFFh, -1d
40238 40239	Stored SPN 10 (least significant word) Stored SPN 10 (most significant word)	U	NA	0 - 524287	1	FFFFFFFFh, -1d
40240 40241	Stored FMI 10 Stored Occurrence Count 10	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40242	Stored SPN 11 (least significant word)	Ö	NA NA	0 - 524287	i	FFFFFFFFh, -1d
40243 40244	Stored SPN 11 (most significant word) Stored FMI 11	0	NA	0 - 31	1	FFFFh, -1d
40245 40246	Stored Occurrence Count 11 Stored SPN 12 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFF, -1d FFFFFFFFh1d
40247	Stored SPN 12 (most significant word)	-				,
40248 40249	Stored FMI 12 Stored Occurrence Count 12	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40250 40251	Stored SPN 13 (least significant word) Stored SPN 13 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40252	Stored FMI 13	0	NA	0 - 31	1	FFFFh, -1d
40253 40254	Stored Occurrence Count 13 Stored SPN 14 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFFh, -1d FFFFFFFFh, -1d
40255 40256	Stored SPN 14 (most significant word) Stored FMI 14	0	NA	0 - 31	1	FFFFh, -1d
40257 40258	Stored Occurrence Count 14 Stored SPN 15 (least significant word)	0	NA NA	0 - 127	1	FFFFh, -1d
40259	Stored SPN 15 (most significant word)	U		0 - 524287	I	FFFFFFFFh, -1d
40260 40261	Stored FMI 15 Stored Occurrence Count 15	0 0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40262 40263	Stored SPN 16 (least significant word) Stored SPN 16 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40264	Stored FMI 16	0	NA	0 - 31	1	FFFFh, -1d
40265 40266	Stored Occurrence Count 16 Stored SPN 17 (least significant word)	0 0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh1d
40267 40268	Stored SPN 17 (most significant word) Stored FMI 17	0	NA	0 - 31	1	FFFFh, -1d
40269	Stored Occurrence Count 17	Ō	NA	0 - 127	1	FFFFh, -1d
40270 40271	Stored SPN 18 (least significant word) Stored SPN 18 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40272 40273	Stored FMI 18 Stored Occurrence Count 18	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh1d
40274	Stored SPN 19 (least significant word)	0	NA NA	0 - 524287	1	FFFFFFFFh, -1d
40275 40276	Stored SPN 19 (most significant word) Stored FMI 19	0	NA	0 - 31	1	FFFFh, -1d
40277 40278	Stored Occurrence Count 19 Stored SPN 20 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40279	Stored SPN 20 (most significant word)				1	·
40280 40281	Stored FMI 20 Stored Occurrence Count 20	0	NA NA	0 - 31 0 - 127	1 1	FFFFh, -1d FFFFh, -1d
40282 40283	Stored SPN 21 (least significant word) Stored SPN 21 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40284	Stored FMI 21	0	NA	0 - 31	1	FFFFh, -1d
40285 40286	Stored Occurrence Count 21 Stored SPN 22 (least significant word)	0	NA NA	0 - 127 0 - 524287	1	FFFFh, -1d FFFFFFFh, -1d
40287 40288	Stored SPN 22 (most significant word) Stored FMI 22	0	NA	0 - 31	1	FFFFh, -1d
40289	Stored Occurrence Count 22	0	NA	0 - 127	1	FFFFh, -1d
40290 40291	Stored SPN 23 (least significant word) Stored SPN 23 (most significant word)	0	NA	0 - 524287	1	FFFFFFFFh, -1d
40292 40293	Stored FMI 23 Stored Occurrence Count 23	0	NA NA	0 - 31 0 - 127	1	FFFFh, -1d FFFFh, -1d
40294	Stored SPN 24 (least significant word)	0	NA NA	0 - 127	1	FFFFFFFFh, -1d
40295 40296	Stored SPN 24 (most significant word) Stored FMI 24	0	NA	0 - 31	1	FFFFh, -1d
40297 40298	Stored Occurrence Count 24 Future Use	Ö	NA	0 - 127	i	FFFFh, -1d
40299	Future Use					
40300	Future Use					

SAE J1939 MurphyLink System Implementation of J1939 Parameters Source: SAEJ1939-71 Surface Vehicle Recommended Practice SAE J1939 Section Description **PGN Parameter** Display Value Elec Eng Cont #2 - EEC2 61443 Accelerator Pedal Position 5.3.6 Throttle Percent Load at Current RPM Load@RPM 5.3.7 Elec Eng Cont #1 - EEC1 61444 Actual engine % torque Eng. Tong. Eng RPM **Engine Speed** Vehicle Distance 65248 Trip Distance TripDist 5.3.14 Total Vehicle Distance Veh Dist 5.3.19 Engine hours, Revolutions 65253 **Total Engine Hours** Eng Hrs 5.3.23 **Fuel Consumption** 65257 Trip Fuel TripFuel Total Fuel Used FuelUsed 5.3.28 **Engine Temperature** 65262 **Engine Coolant Temp** Cool Tmp Fuel Temperature Fuel Tmp **Engine Oil Temperature** Oil Tmp Engine Intercooler Temperature Into Tmp 5.3.29 Engine Fluid Level/Pressure 65263 Fuel Delivery Pressure **FuelPres** Engine Oil Level Oil Lvl Engine Oil Pressure Oil Pres Coolant Pressure CoolPres Coolant Level Cool Lvl 5.3.31 65265 Cruise Control /Vehicle Speed Wheel Based Vehicle Speed Veh Spd Fuel Rate 5.3.32 Fuel Economy 65266 FuelRate Instantaneous Fuel Economy FuelEcon Average Fuel Economy Avg Econ 5.3.35 65269 **Ambient Conditions** Barometric Pressure BaroPres Air Inlet Temperature AirInTmp Inlet/Exhaust Conditions 65270 5.3.36 **Boost Pressure** Bst Pres Intake Manifold Temp Mani Tmp Air Filter Differential Pressure AirDifPr Exhaust Gas Temperature Exh Tmp Electrical Potential (Voltage) Sys Volt Vehicle Electrical Power 65271 5.3.37 Battery Pot. Voltage (Switched) Bat Volt Transmission Fluids 65272 5.3.38 Transmission Oil Pressure TranPres Transmission Oil Temperature Tran Imp Engine Fluid Level/Pressure #2 65243 Injector Metering Rail 1 Pres 5.3.46 InjPres1 Injector Metering Rail 2 Pres InjPres2 5.3.58 Fan Drive 65213 Fan Spd 65226 DM1 - Active Diagnostic SrvcCode Diagnostic Messages 65227 DM2 - Previously Act Diag Codes StorCode 65228 DM3 - Diagnostic Clear Eng Conf 5.3.17 Engine Conf. 65251 **Engine Configuration**

Warranty - A limited warranty on materials and workmanship is given with this Murphy product.

A copy of the warranty may be viewed or printed by going to www.murphybyenovationcontrols.com/warranty

ENOVATION CONTROLS CORPORATE HEADQUARTERS 5311 S 122ND EAST AVENUE TULSA. OK 74146

ENOVATION CONTROLS LTD. — UNITED KINGDOM CHURCH ROAD LAVERSTOCK SALISBURY SP1 1QZ UK

MURPHY INTERNATIONAL TRADING — CHINA SUITE 1704, ANTAI BUILDING, 107 ZUNYI RD SHANGHAI, 2000 S1 CHINA

ENOVATION CONTROLS INDIA PVT. LTD.
301, 3RD FLOOR, KRSNA CHAMBERS,
11 GALAXY GARDENS, NORTH MAIN ROAD,
KOREGAON PARK, PUNE 411001,
MAHARASHTRA INDIA

U.S. SALES & SUPPORT

MURPHY PRODUCTS PHONE: 918 317 4100

EMAIL: SALES@ENOVATIONCONTROLS.COM WWW.ENOVATIONCONTROLS.COM

MURPHY INDUSTRIAL PANEL DIVISION

PHONE: 918 317 4100

EMAIL: IPDSALES@ENOVATIONCONTROLS.COM

INTERNATIONAL SALES & SUPPORT

EUROPE, MIDDLE EAST, AFRICA

PHONE: +44 1722 410055 EMAIL: SALES@ENOVATIONCONTROLS.EU

CHINA

PHONE: +86 21 6237 5885

EMAIL: APSALES@ENOVATIONCONTROLS.COM

LATIN AMERICA & CARIBBEAN

EMAIL: LASALES@ENOVATIONCONTROLS.COM

INDIA

PHONE: +91 91581 37633

EMAIL: INDIASALES@ENOVATIONCONTROLS.COM

