

Installation Manual Insert for iMA iGuard Mimic (Repeater) Annunciator Version 1.26

iG-04069N
Insert to: iG-02117N & eGD-04070N
Effective 04-04
Section 75 (00-02-0570)



Please read the following information before installing. A visual inspection of this product for damage during shipping is recommended before mounting. It is your responsibility to have a qualified person install this unit and make sure it conforms to NEC and local codes.

 
GENERAL INFORMATION

iMA iGuard Mimic (Repeater) Annunciator

The iMA is composed of the bezel, o-ring, the user interface board, and a wire cover.


To operate the iMA, power must be supplied to the J1 connector on the rear of the unit.

J1 Power Connector:



The iMA with the host iGuard controller via a RS485 two wire + shield connection. The connector is wired as shown below:

J3 Communications Connector:

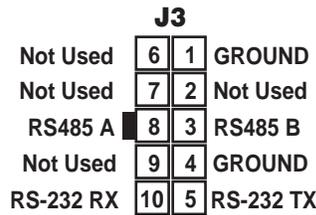

To configure the iMA for a particular application, after applying power:

Press the BACK & NEXT keys at the same time.

The screen will change to identify the hardware/software as configured.

Press NEXT

The top line will display the station number.

The menus are as follows:

1. Modbus server address - This is the address of this device as seen on the network. Default is 243.
2. Key sensitivity level - This sets the required amount of force to activate the keypad. Default is Normal
3. LCD backlight - This selects whether the LCD backlight is enabled or not. If disabled, the backlight will not come on. Default is enabled
4. iGuard beeper - This selects whether or not the station beeper is enabled. If disabled, the station will not sound any audible alarm for faults or warnings. Default is enabled.
5. Interface type - hard coded to RS485 Modbus
6. RS485 bit frame - Sets the configuration of the data transmission. Default (to match the iGuard default) is 10 bits N-8-1.
7. RS485 baud rate - Selects the data transmission rate, and must match the rate settings on the iGuard it is connected to. Default is 38400.

NOTE:

There are corresponding settings in the iGuard Installation and operations manual (iG-02117N) for choosing how the station operates. The selections are "Mimic" and "Annunciator"

In the Mimic mode, the remote station is allowed to behave exactly as if it were the front panel of the actual iGuard - the user may start and stop manually, change between automatic and manual modes, acknowledge alarms, and reset the system. The only thing that a iMA iGuard mimic panel cannot do is change the programming on the master.

In the Annunciator mode, the station may acknowledge its own alarms and look at data, but it cannot do any control functions.