



# CANdrive™ Module

## *Installation and Operations Manual*

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. The latest version of this manual can be found at [www.fwmurphy.com](http://www.fwmurphy.com).

**Warranty** - A limited warranty on materials and workmanship is given with this Murphy product.  
A copy of the warranty may be viewed or printed by going to [www.fwmurphy.com/warranty](http://www.fwmurphy.com/warranty).



Please read the following information before installing.

**BEFORE BEGINNING INSTALLATION OF THIS MURPHY PRODUCT:**

A visual inspection of this product for damage during shipping is recommended before installation.

It is your responsibility to ensure that qualified mechanical and electrical technicians install this product.

Disconnect all electrical power to the machine.

Make sure machine cannot operate during installation.

Follow all safety warnings of the machine manufacturer.

Read and follow all installation instructions.

Please contact Enovation Controls immediately if you have any questions.

## Table of Contents

<b>General Information</b> .....	<b>1</b>
Introduction .....	1
<b>Installation Instructions</b> .....	<b>2</b>
Configuration .....	2
Electrical Connection .....	3
Panel Mounting .....	5
<b>Operation and Maintenance</b> .....	<b>6</b>
Gage Driver Outputs .....	6
Indicating LEDs .....	6
Specifications .....	7
Power Supply .....	7
Inputs .....	7
Outputs .....	7
General .....	7
Maintenance .....	7

**(THIS PAGE INTENTIONALLY LEFT BLANK)**

## General Information

### Introduction


As part of the MurphyLink® family, the CANdrive™ offers a cost effective instrument solution for modern electronic engines. CANdrive acts as an interface between ECU CANbus/J1939 transmitted data and standard electric indicating gages. CANdrive and electric gages are an alternative solution to retrofitting of engine senders, magnetic pickups and associated wiring.

CANdrive has dedicated outputs for a tachometer, oil pressure, and coolant temperature electric gages. Configurable switch settings allow for selectivity between 12 or 24 VDC systems, and for all gage outputs to be selected for Murphy, VDO, or Datcon.

CANdrive is packaged in a compact, surface-mounted case with epoxy encapsulation for maximum durability and environmental sealing. Electrical connection is through a 12-way automotive-type connector.

### Standard Model Options


Stock Code	Model / Description
78-70-0363	<b>CDV100F</b> , CAN drive J1939 to electric gage interface. 1 x CAN status LED, connector forward
78-70-0364	<b>CDV300R</b> , CANdrive J1939 to electric gage interface. 8 x status/fault LEDs, connector rearward. Model CDVG sealing gasket included.
78-00-0437	<b>CDV-PW-30</b> , CANdrive power and CAN harness. Length: 30 in. (0.762m). Included with CDV100F and CDV300R

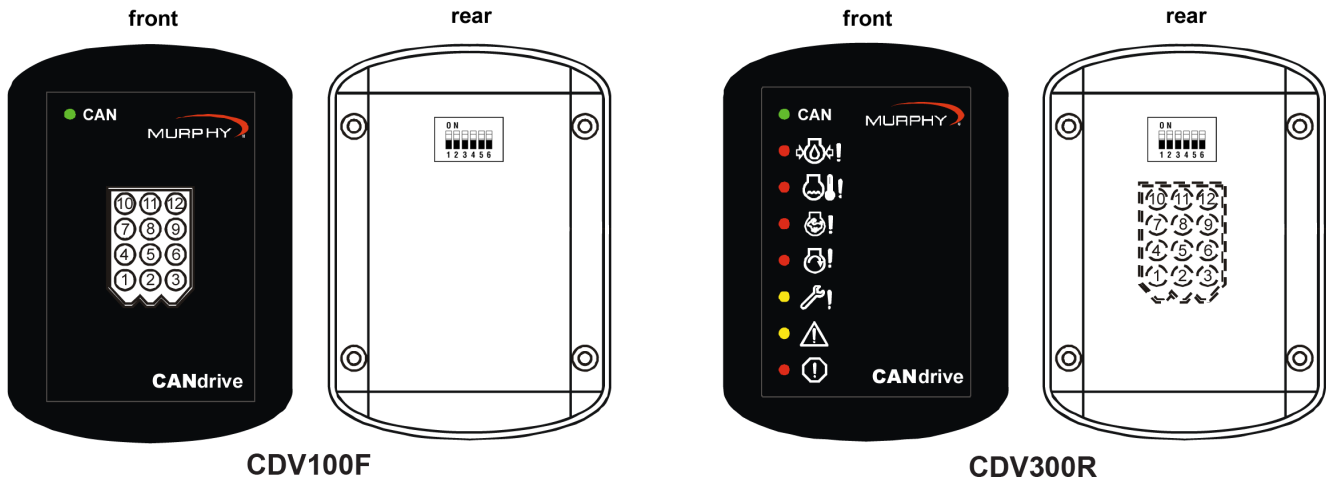

# Installation Instructions

## Configuration

CANdrive modules are supplied with configuration switches located on the back side of the unit. All switches are factory set to the ON (pushed up) position. Switches 1 to 5 allow configuration of CANdrive operating options. Switch 6 is not used.

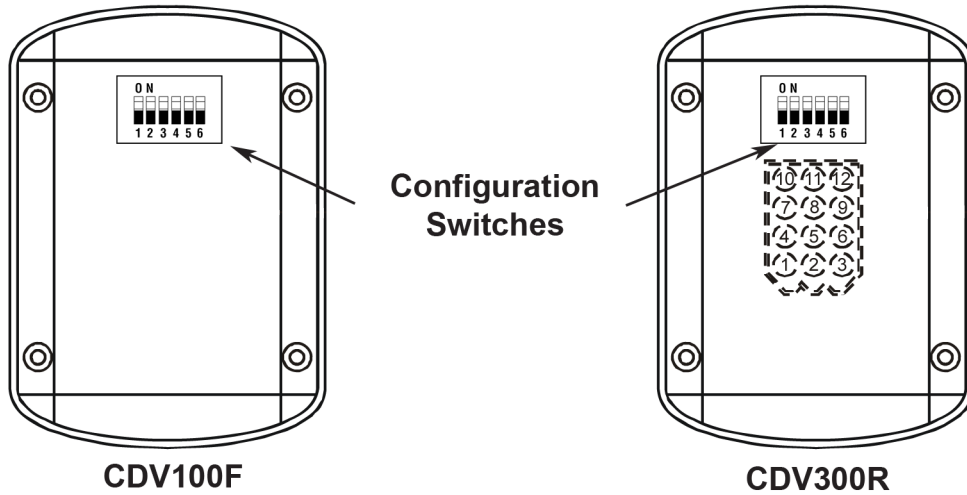

## Configuration Table

Switch settings must be made according to the configuration table below.

Switch position		<span style="color: green;">▲</span> on (up) <span style="color: red;">▼</span> off (down)			Options:
S1	S2	S3	S4	S5	
▲	▲	▲			Murphy temp. and pressure gauges
▼	▲	▲			Datcon temp. and 0 – 7 bar pressure gauges
▼	▲	▼			Datcon temp. and 0 – 10 bar pressure
▲	▼	▲			VDO temp. and 0 – 5 bar pressure gauges
▲	▼	▼			VDO temp. and 0 – 10 bar pressure gauges
			▲		CAN 120 Ohm terminating resistor in circuit
			▼		CAN 120 Ohm terminating resistor removed
				▲	12V DC power supply
				▼	24V DC power supply



**WARNING: Adjustment of the switch positions must be made while CANdrive is powered down.**

## Gage Compatibility Tables

Pressure gauge compatibility table: pressure versus gauge equivalent sender resistance (Ohms)

Pressure	psi	0	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	bar	0	0.7	1.4	2.1	2.8	3.4	4.1	4.8	5.5	6.2	6.9	7.6	8.3	9.0	9.7	10.3
Murphy		240	205	171	143	123	103	88	74	60	47	33					
Datcon		240	200	165	135	115	95	78	63	48	35	25					
VDO 0 – 7 bar		0	17	37	53	69	83	95	107	118	130	140					
VDO 0 –10 bar		10															184

Temperature gauge compatibility table: temperature versus gauge equivalent sender resistance (Ohms)


Temperature	°C	40	50	60	70	80	90	100	110	120	130	140
	°F	104	122	140	158	176	194	212	230	248	266	284
Murphy		1029	680	460	321	227	164	120	89	74	52	40
Datcon		900	600	400	278	200	141	104	74	50	27	4
VDO		282.4	190.0	134.0	95.2	69.1	51.2	38.5	29.4	22.7	18.0	14.5

## Electrical Connection

CANdrive modules electrical connection is through a 12-way automotive type receptacle shown right. CANdrive models are available with the connector facing forward through the front label ('F' option, e.g. model CDV100F), or rearward through the epoxy encapsulation ('R' option, model CDV300R).

CANdrive electrical connection is through a 12-way automotive type receptacle. A 30-inch connector harness is included with each CANdrive model, and has each wire individually labeled for ease of installation.

## Typical Connection

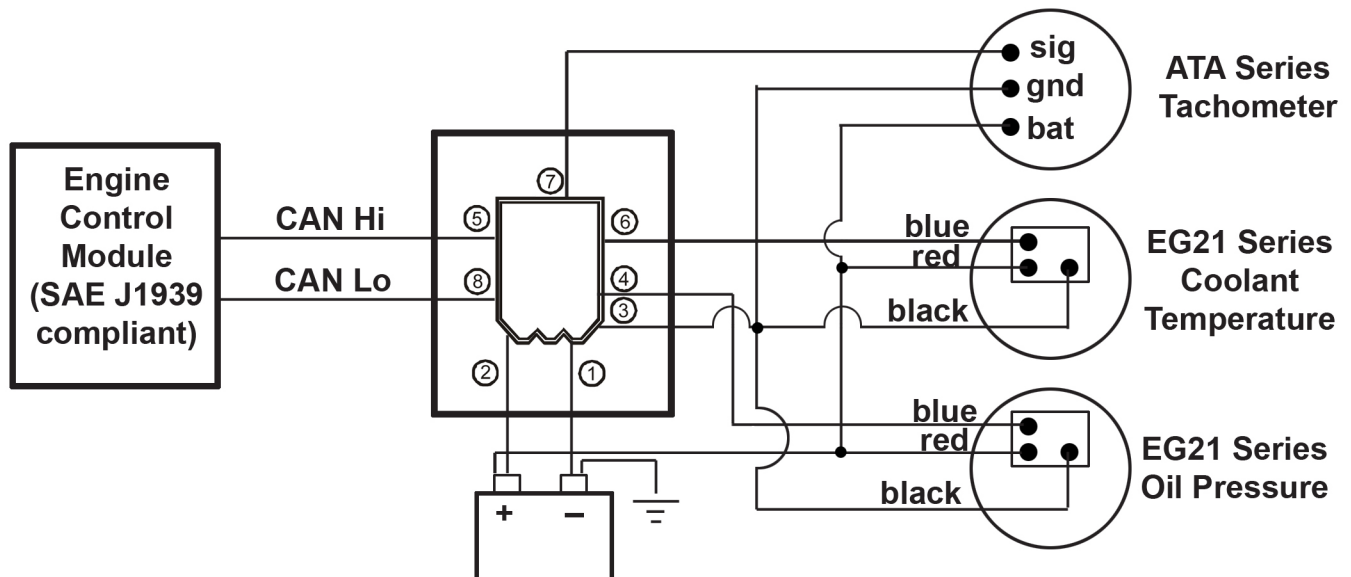

## Terminal Functions

PIN	Function
1	<b>Negative DC, power supply</b>
2	<b>Positive DC, power supply</b>
3	<b>Negative DC, gage common return</b> CANdrive modules are supplied for use with 12V (7 to 16V) DC operation. If 24V (19 to 30V) DC operation is required, switch 5 must be pushed to the off (down) position. Connect a 1 Amp anti-surge fuse in the positive DC line (pin 2).
4	<b>Oil pressure gage output</b>
6	<b>Coolant temperature gage output</b> Pins 4 and 6 give a variable current output for driving oil pressure and coolant temperature electric gages. The outputs can operate with several different gauge types, according to the settings of switches 1, 2, and 3 - see Configuration section above.
7	<b>Tachometer output</b> Pin 7 gives a square wave output (0V to battery positive DC), with a frequency that is proportional to engine speed. At 1500 RPM engine speed, the output is approximately 121 Hz, suitable for driving charge alternator based tachometers such as the Murphy AT(H)A series. Pin 7 gives no output below 100 RPM engine speed. Connect each output to the appropriate gage/ tachometer signal input. Gage/tachometer negative terminals should be common to battery negative, ideally via dedicated wiring to terminal 3. (The use of dedicated return wiring to pin 3 rather than a ground return will minimize gage inaccuracies caused by ground noise.)
5	<b>CAN Hi</b>
8	<b>CAN Lo</b> Connect these terminals to the engine CANbus, taking care to observe the correct polarity. The CANbus cable screen/shield is typically connected to ground at the ECU end: refer to the engine manufacturer's installation guidelines. CANdrive modules are supplied with a 120 Ohm network terminating resistor fitted in-circuit between CAN Hi and CAN Lo. If CANdrive module is not positioned at the end of the CANbus network, remove the resistor by pushing switch 4 off (down).
9	<b>Reserved for future use</b>
10	<b>Factory use</b>
11	<b>Factory use</b>
12	<b>Factory use</b>

**NOTE:** Connection Pins 9, 10, 11, and 12 are reserved for future use, or are used in the factory setup of CANdrive modules. Do not connect wiring or equipment to these terminals. Connection can result in permanent damage to CANdrive modules.





## Operation and Maintenance

### Gage Driver Outputs








Gage outputs operate when CANdrive module reads valid J1939 data for engine speed, oil pressure and coolant temperature. If CANdrive module stops receiving valid data, the gage outputs are maintained at the last known value for approximately five seconds, after which time the outputs are turned off.

### Indicating LEDs

All standard models have a green CAN status LED. A flashing CAN status LED indicates that CANdrive module is powered, but is not receiving any J1939 data. A constantly lit CAN status LED indicates a good CANbus connection and J1939 activity. (Note: J1939 activity can originate from ANY device on the CANbus network, and may not be valid data from the engine ECU.)

Model CDV300R has additional LEDs for indication of engine faults, as transmitted from the ECU. CANdrive modules respond to single DM1 (active fault code) messages that contain a Suspect Parameter Number (SPN), Fault Mode Indicator (FMI) and warning/stop lamp data. CANdrive modules also read multi-packet transport messages broadcast using the broadcast address message (BAM) protocol.

LEDs typically light continuously to indicate a shutdown fault, and flash to indicate a (non-shutdown) warning fault.

LED	Mode	Fault	J1939	
			SPN	FMI
	On	Low oil pressure shutdown	100	1
	Flashing	Low oil pressure warning	100	> 1
	On	Coolant temperature shutdown	110	0
	Flashing	Coolant temperature warning	110	> 0
	On	Overspeed shutdown	190	0
	Flashing	Overspeed warning	190	> 0
	-	Reserved for future use	-	-
	-	Reserved for future use	-	-
	Flashing	Warning fault	-	-
	Flashing	Shutdown fault	-	-

CANdrive modules can handle up to 8 simultaneous faults at one time; additional fault messages are not registered. When a fault becomes inactive and is no longer broadcast, the appropriate LED goes out after approximately two seconds.

## Specifications

### Power Supply

---

Operating voltage:

12V range (switch S5 on/up)      7-16 VDC

24V range (switch S5 off/down)    19-30 VDC

Current consumption:

CDV100F: 25mA typical

CDV300R: 50mA, typical (2 LEDs lit)

### Inputs

---

CANbus:

SAE J1939 protocol, Input fitted with 120 Ohm terminating resistor, removable by switch 4.

### Outputs

---

Oil pressure gage, coolant temperature gage

Switch selectable for Murphy, VDO or Datcon electric gages

Tachometer

Pulsed DC, approximately 121 Hz @ 1500 RPM

### General

---

Overall dimensions (W x H x D)

Case: 2.7x3.8x0.9 inch (68x96x22mm) (allow 2 inches (50mm) depth with connector)

Weight: approximately .18 lbs (80g)

Environmental sealing

IP60

CDV300R: IP65 from front with CDVG gasket (included)

Operating ambient temperature: -40° F to 185° F (-40°C to +85°C)

Storage temperature: -67°F to 221°F (-55°C to 105°C)

Operating Vibration: .02 lbs (10g) (5-2000 Hz)

Operating Shock: .11 lbs (50g) (3-axis)

### Maintenance

---

CANdrive modules have no user-serviceable parts. Maintenance is therefore limited to the following preventative checks:

Check that electrical connections are secure.

Check that the CANdrive module is securely mounted and kept free from exposure to water or build up of excessive dust/dirt. The front label and casing may be wiped with a clean, damp cloth. Do not use cleaning solvents.

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC, with all rights reserved. (c) 2016 Enovation Controls, LLC. A copy of the warranty may be viewed or printed by going to [www.fwmurphy.com/warranty](http://www.fwmurphy.com/warranty).

**ENOVIATION CONTROLS CORPORATE HEADQUARTERS**

5311 S 122ND EAST AVENUE  
TULSA, OK 74146

**ENOVIATION CONTROLS – SAN ANTONIO OFFICE**

5757 FARINON DRIVE  
SAN ANTONIO, TX 78249

**ENOVIATION CONTROLS – HOUSTON OFFICE**

105 RANDON DYER RD  
ROSENBERG, TX 77471

**ENOVIATION CONTROLS LTD. – UNITED KINGDOM**

CHURCH ROAD LAVERSTOCK  
SALISBURY SP1 1QZ UK

**MURPHY ECONTROLS TECHNOLOGIES (HANGZHOU) CO, LTD.**

77 23RD STREET  
HANGZHOU ECONOMIC & TECHNOLOGICAL DEVELOPMENT AREA  
HANGZHOU, ZHEJIANG 310018 CHINA

**U.S. SALES & SUPPORT**

**ECONTROLS PRODUCTS**

PHONE: 210 495 9772  
FAX: 210 495 9791  
EMAIL: [INFO@ENOVIATIONCONTROLS.COM](mailto:INFO@ENOVIATIONCONTROLS.COM)  
[WWW.ECONTROLS.COM](http://WWW.ECONTROLS.COM)

**MURPHY PRODUCTS**

PHONE: 918 317 4100  
FAX: 918 317 4266  
EMAIL: [SALES@ENOVIATIONCONTROLS.COM](mailto:SALES@ENOVIATIONCONTROLS.COM)  
[WWW.FWMURPHY.COM](http://WWW.FWMURPHY.COM)

**MURPHY CONTROL SYSTEMS & SERVICES**

PHONE: 281 633 4500  
FAX: 281 633 4588  
EMAIL: [CSS-SOLUTIONS@ENOVIATIONCONTROLS.COM](mailto:CSS-SOLUTIONS@ENOVIATIONCONTROLS.COM)

**MURPHY INDUSTRIAL PANEL DIVISION**

PHONE: 918 317 4100  
FAX: 918 317 4124  
EMAIL: [IPDSALES@ENOVIATIONCONTROLS.COM](mailto:IPDSALES@ENOVIATIONCONTROLS.COM)

**INTERNATIONAL SALES & SUPPORT**

**UNITED KINGDOM**

PHONE: +44 1722 410055  
FAX: +44 1722 410088  
EMAIL: [SALES@ENOVIATIONCONTROLS.EU](mailto:SALES@ENOVIATIONCONTROLS.EU)  
[WWW.FWMURPHY.EU](http://WWW.FWMURPHY.EU)

**CHINA**

PHONE: +86 21 6237 5885  
FAX: +86 21 6237 5887  
EMAIL: [APSALES@ENOVIATIONCONTROLS.COM](mailto:APSALES@ENOVIATIONCONTROLS.COM)

**LATIN AMERICA & CARIBBEAN**

PHONE: 918 317 2500  
EMAIL: [LASALES@ENOVIATIONCONTROLS.COM](mailto:LASALES@ENOVIATIONCONTROLS.COM)

**SOUTH KOREA**

PHONE: +82 70 7951 4100  
EMAIL: [SKOREASALES@ENOVIATIONCONTROLS.COM](mailto:SKOREASALES@ENOVIATIONCONTROLS.COM)

**INDIA**

PHONE: +91 91581 37633  
EMAIL: [INDIASALES@ENOVIATIONCONTROLS.COM](mailto:INDIASALES@ENOVIATIONCONTROLS.COM)



FM 28221 (Tulsa, OK - USA)  
FM 620667 (San Antonio, TX - USA)  
FM 28221 (Rosenberg, TX - USA)  
FM 29422 (UK)



FM 523851 (China) TS 589322 (China)