

# Murphy CONNECT

## Telematics for PowerCore<sup>®</sup> Products

### Operations Manual

Initial Release for U.S. Only

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time.

**Warranty** - A limited warranty on materials and workmanship is given with this Murphy product. A copy of the warranty may be viewed or printed by going to [www.enovationcontrols.com/warranty](http://www.enovationcontrols.com/warranty)



**BEFORE BEGINNING INSTALLATION OF THIS MURPHY PRODUCT:**

- Read and follow all installation instructions.
- Visually inspect this product before installation for any damage during shipping.
- Disconnect all electrical power to the machine. Failure to do this before welding can result in damage to the panel and/or its components.
- It is your responsibility to have a qualified technician install the unit and make sure the installation conforms to local codes including but not limited to double insulation and fire containment.
- Observe all Warnings and Cautions in each section of these instructions.
- The Murphy CONNECT product is a telemetry product designed for use in industrial environments for remote monitoring and control when used with Murphy's PowerCore® family of controllers.

Contact Enovation Controls Technical Service if you have any questions or concerns at: +1 918-317-4100.

**IMPORTANT!** Improper use and operation of electronic products can be dangerous. It is required that point-of-operation guarding devices be installed and maintained. All such devices must meet OSHA and ANSI Machine safety standards. The manufacturer shall not accept any responsibility for installation, application or safety of systems.

## Table of Contents

Introduction.....	5
Registering/Creating a New Account.....	6
New Site Setup .....	7
Adding New Site Personnel (Users).....	9
Adding a New Child Site (Customer Site).....	11
Adding, Deleting, and Moving Equipment.....	12
Site Equipment .....	14
Murphy CONNECT Specifications .....	22
Power Supply .....	23
Inputs/Outputs.....	23
Communications .....	23
Connection .....	23
Physical / Environmental.....	23



The CONNECT device can be used for remotely starting an engine when used in conjunction with Murphy's PowerCore® controllers and start unexpectedly. Please be cognizant at all times of hands and other objects that are in close proximity to the machine(s) being controlled as they may commence operation suddenly and without warning

## Introduction

The Murphy CONNECT telematics unit provides simple and dependable communication power for PowerCore® panels and controllers. Murphy CONNECT is an easy, plug-and-play solution for rental fleets, agriculture and pump systems as well as other PowerCore controller and panel users wishing to automate or remotely monitor their engines.

The Murphy CONNECT unit is controlled from a cloud-based dashboard that provides secure access from a computer or mobile device and is designed to be easy-to-use. LTE cell technology provides worry-free data networking and allows you to stay connected from any location. (LTE service required, 2-year service agreement included)

From the online dashboard, users can monitor their equipment's location using the unit's built-in GPS and set radius alerts for when it moves. Users can also view trends based on an engine's usage, and control engine starts and stops while adjusting throttle functions for the engine and application. The cloud-based system is also multi-user and multi-unit capable for companies that need to provide access across several units, locations or employees.


Built to survive the same harsh conditions as the PowerCore controllers, the IP67-rated telematics unit remains operational alongside PowerCore products with rugged protection from freezing temperatures, extreme heat, moisture and dust.

Murphy CONNECT provides astounding benefits by helping reduce costs, prevent downtime and optimize efficiency with intelligent analytics, real-time alerts and warnings.

## Registering/Creating a New Account

**NOTE:** In order to register/create a new account a Murphy CONNECT device must be on hand that is not currently registered with another account.


Begin by going to the Murphy CONNECT webpage [connect.enovationcontrols.com](http://connect.enovationcontrols.com). There is a yellow box labeled Register in the lower right side of the Login Box. Click the Register button to begin registering a new account.

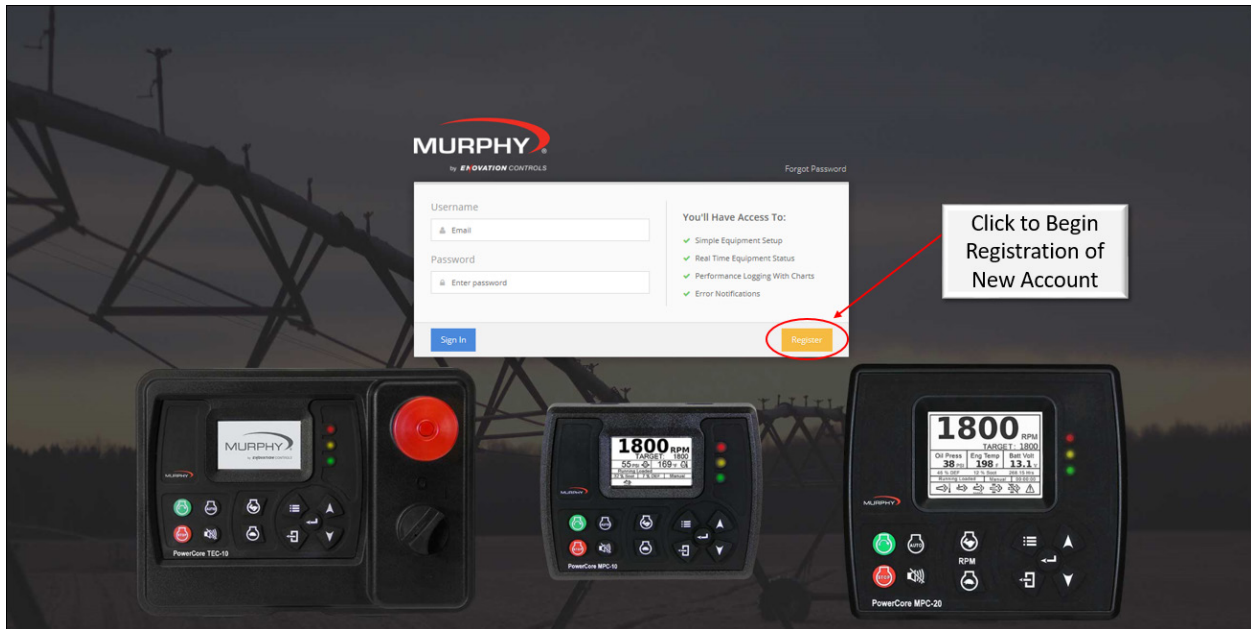

After clicking the register button on the login page the site will direct you to an Add New User registration page. Fill out all necessary boxes in the form before clicking the button Create Account. **In order to submit the request a new Murphy CONNECT device is required.**


A screenshot of the 'Add New User' registration page. The form is divided into three sections: 'User Information', 'Login Information', and 'Alarm Notifications'. In the 'User Information' section, the 'Equipment' field is highlighted with a red circle and contains the text 'SampleSerial1'. A red arrow points from a text box 'Enter Serial Number Off the Rear Label of the Connect Hardware' to this field. In the 'Login Information' section, the 'Email' field is filled with 'scustomer@enovationcontrols.com'. In the 'Alarm Notifications' section, the 'Email' field is also filled with 'scustomer@enovationcontrols.com'. At the bottom of the form, the 'Create Account' button is highlighted with a red circle. A red arrow points from a text box 'Click Create Account to Complete Registration of New Account' to this button.

Once the new account is created the Sign In screen will be shown and allow the Admin to sign in after filling out and submitting the registration form.

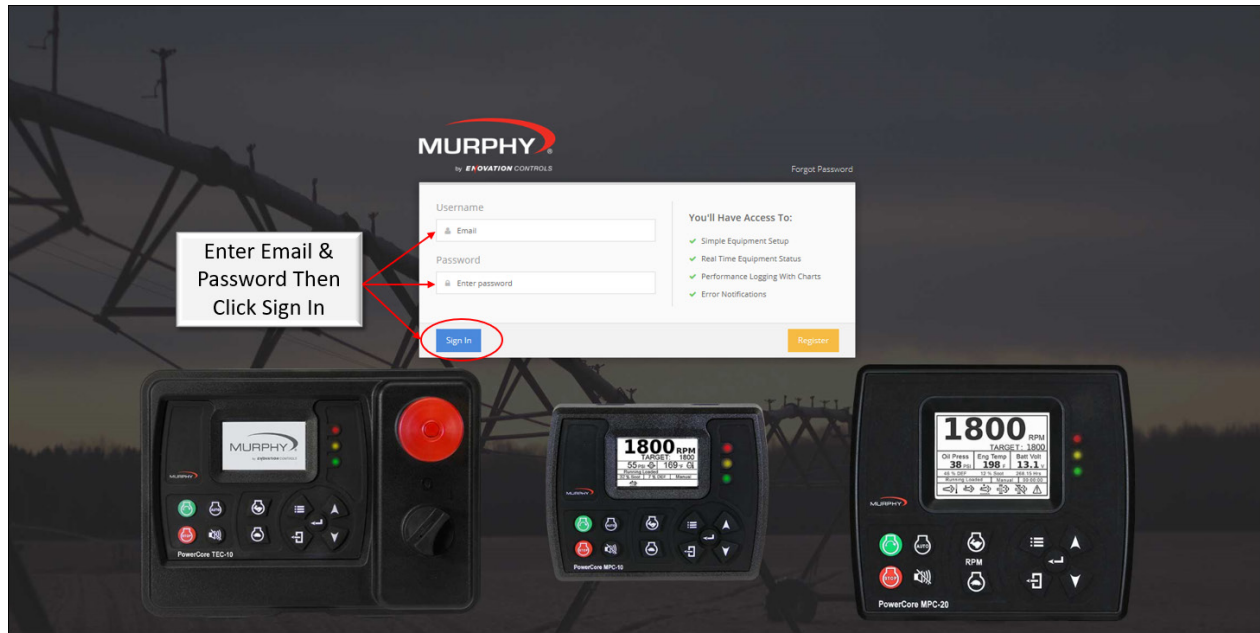

## New Site Setup

Once registered and logged in, the Site will show the serial number of the unit used to register. Click on the serial number under the map in the section labeled Connected Sites.

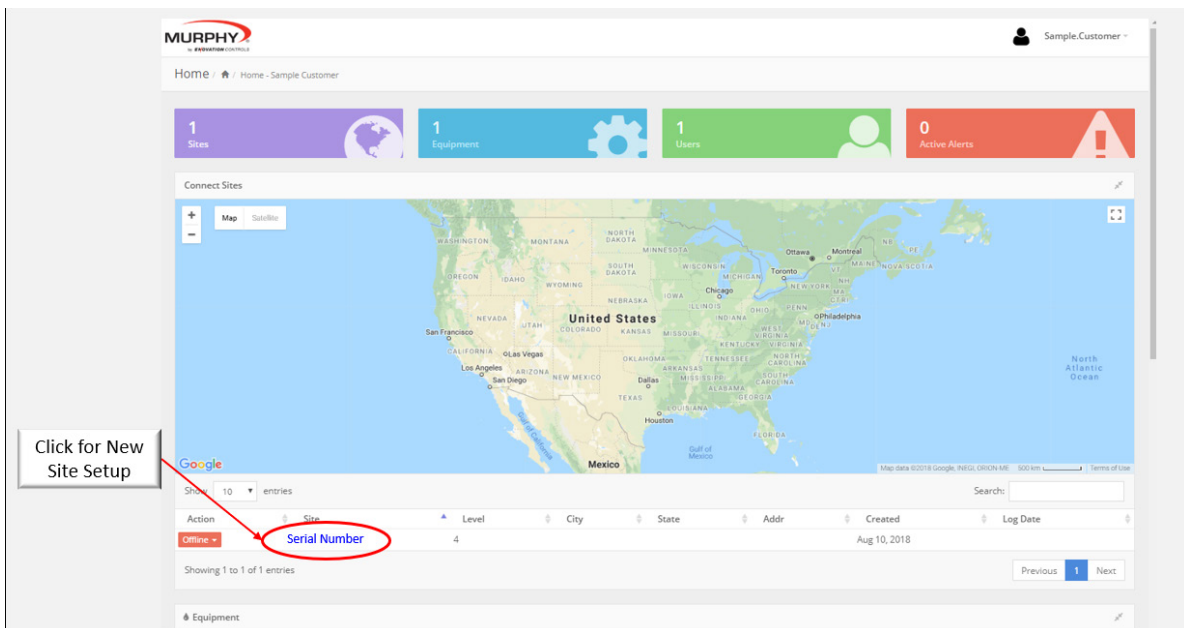

Once the serial number has been clicked the site will open another page for form completion. This form will allow naming of the site, site description, business name, contact phone, contact email, time zone selection, site logo/image to be loaded, site address and site personnel to be added/edited.

MURPHY  
by ENOVATION CONTROLS

Sample Customer

Site / Home - Sample Customer / Site - Sample Customer Site

Map Satellite

Site Equipment

Action	Name	Product	Serial #	Alarms	Log Date
Offline -	Ocefaf4caa801	Murphy MPC-10	Ocefaf4caa801	0	

Site Information - OFFLINE

Site Name: Sample Customer Site

Site Description: Sample Site for Customer Information

ENOVATION CONTROLS

100%

Business Name:  Image...

Contact Phone:

Contact Email:

Time Zone:

Map Satellite

Click to Save Site Information

Save Site

Site Personnel


Action	Name	Email	Phone	Mobile	Registered
Admin -	Sample Customer	scustomer@novationcontrols.com	9183174100	9183174100	Aug 10, 2018

Alerts



## Adding New Site Personnel (Users)

The CONNECT site allows for two different levels of users. The two levels are defined as Admin and User for Site Personnel. To add a new User, select the site to which the user will be added. Once on the site scroll down to the Site Personnel section and click New.

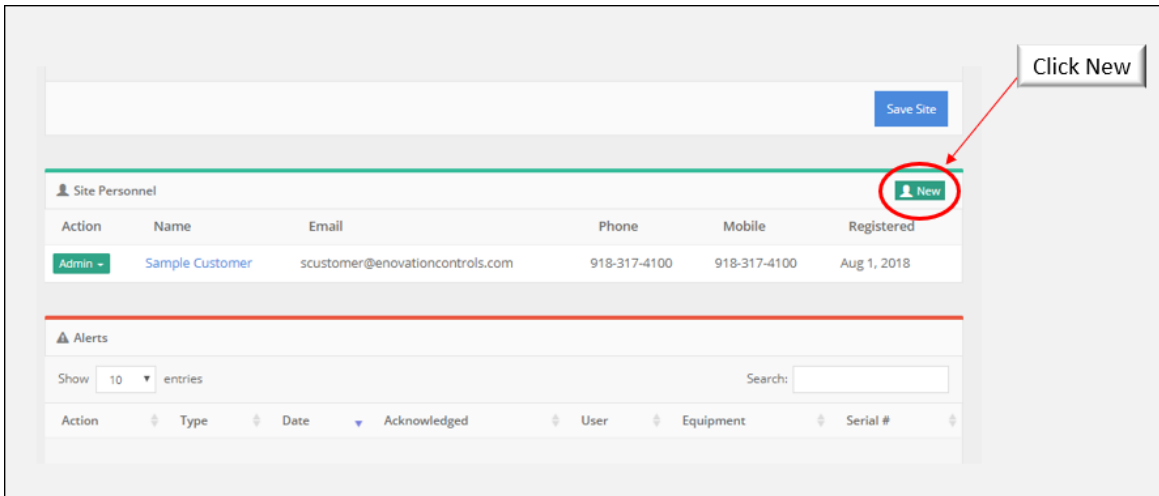

Fill in the new user information and click Create Account. Review the Admin and User sections on the next page in order to decide which type of access to give the new user.

The screenshot shows the 'Add New User' form in the CONNECT interface. The form is divided into three sections: 'User Information', 'Login Information', and 'Alarm Notifications'. In the 'User Information' section, there are fields for First Name (Sample), Last Name (Customer1), Phone (918-317-4100), Mobile (918-317-4100), Title (Manager), and Billing (NO Primary Contact). In the 'Login Information' section, there are fields for Email (scustomer1@novationcontrols.com), Password (masked), and Confirm (masked). In the 'Alarm Notifications' section, there are fields for Email (scustomer1@novationcontrols.com), Mobile Text (Optional mobile - 888-888-8888), and a checkbox for 'Enable voice calls' (NO). A red circle highlights the 'Create Account' button at the bottom right of the form. A callout box with a red arrow points to the 'Create Account' button, containing the text 'Click Create Account'.

## User Information

This section provides identity information for other users registered on the site to be viewed and contacted if needed.

- **Title:** This setting is only used for reference as the number of site personnel grows.
- **Billing:** This setting is to alert the particular user for subscription renewal.

## Login Information

This section provides the information for logging into the site with email and password. This section also designates the level of access given to the user (User or Admin).

- **User:** User level users are able to login and see assigned sites as well as child sites, view and control site equipment, view site personnel, acknowledge and delete alerts, and view/export Device Status Trends.
- **Admin:** Admin level users are able to do everything the user level is able to do plus add and remove users, move equipment from site to site, edit site information, add Child Sites, turn on/off and change equipment Radius Alerts, load New CONNECT Firmware, and perform equipment EZ Setup.

## Alarm Notifications


This section provides the contact information to which alerts will be sent if desired when an alert is present on the device/controller.

- **Email:** Enter the email address of any user desiring email notifications of existing alarms.
- **Mobile Text:** Enter the mobile phone number of any user desiring mobile text message notifications of existing alarms.


**NOTE:** Do not add a country code "1" for United States or place hyphens in the number (e.g. 9183174100). Use the drop-down box to select the carrier used for Text message notifications. Be sure to test the alert notification to ensure the carrier setting is correct.

## Adding a New Child Site (Customer Site)

The CONNECT web portal allows for companies to setup customer sites also referred to as Child Sites. This allows one company to assist in managing the setup and contract renewals for their customers. This also allows for customers to add personnel and their own child sites to their main site if the locations are different.

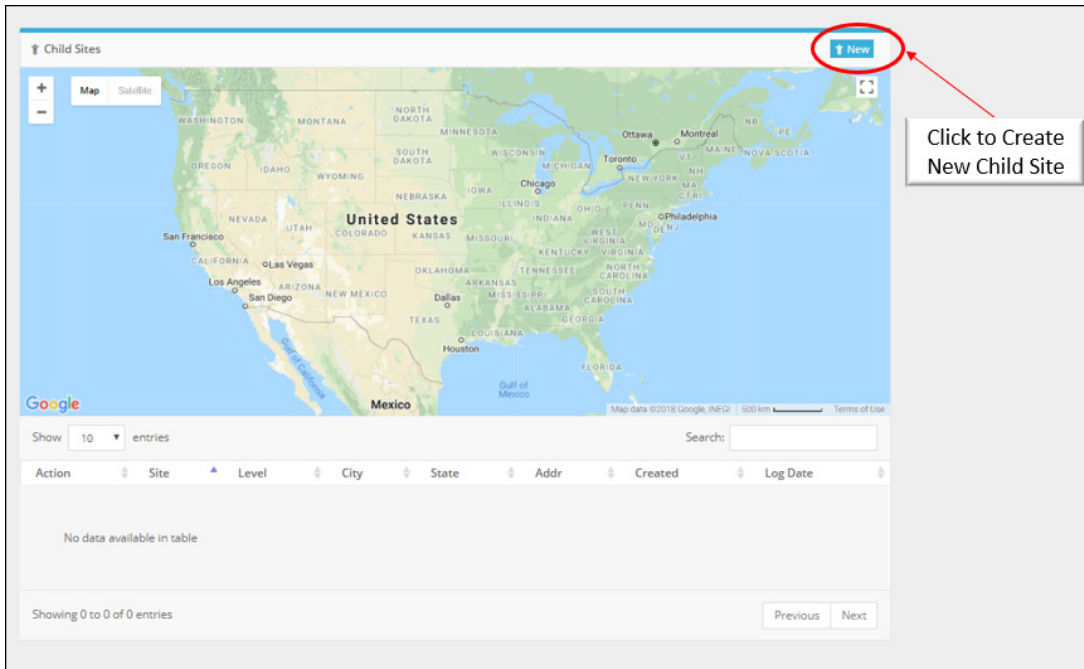

Once the New Child Site button is clicked, a new window will open to fill out a form for the child site similar to the form for the original site setup. Once the information is all entered, click the Save Site button to save the site under the original company site.

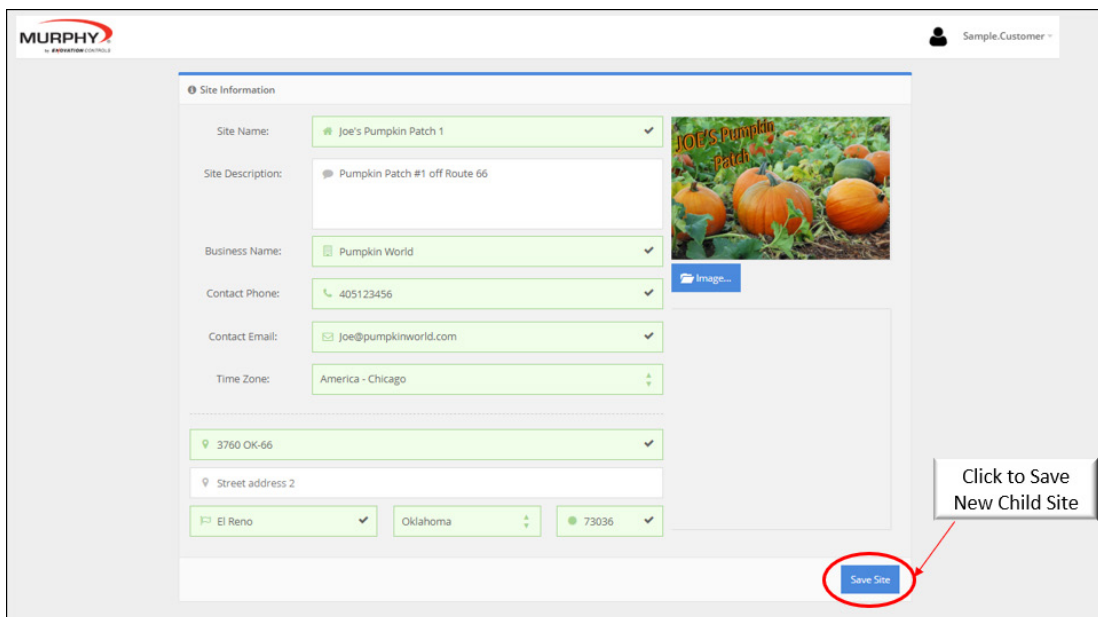

Once the child site is established, the site will be shown as a child of the original company. This site can now have new personnel (both users and admin) added to see and manage their site.

**NOTE:** Be cognizant of viewing, editing, and deleting customer sites on the original company site. All equipment and sites are live once showing Online.


## Adding, Deleting, and Moving Equipment

The Equipment section of the site shows how many pieces of equipment are assigned under each site with device name, the product being assigned to (MPC-10/TEC-10 or MPC-20), Serial Number of the unit, alarms, and when the unit started its online subscription.

### Adding Equipment

Add equipment either to the home site and move (as detailed below) to the child site or add directly to the child site.

Start by clicking New in in the Site Equipment section of the site as shown in the image below.

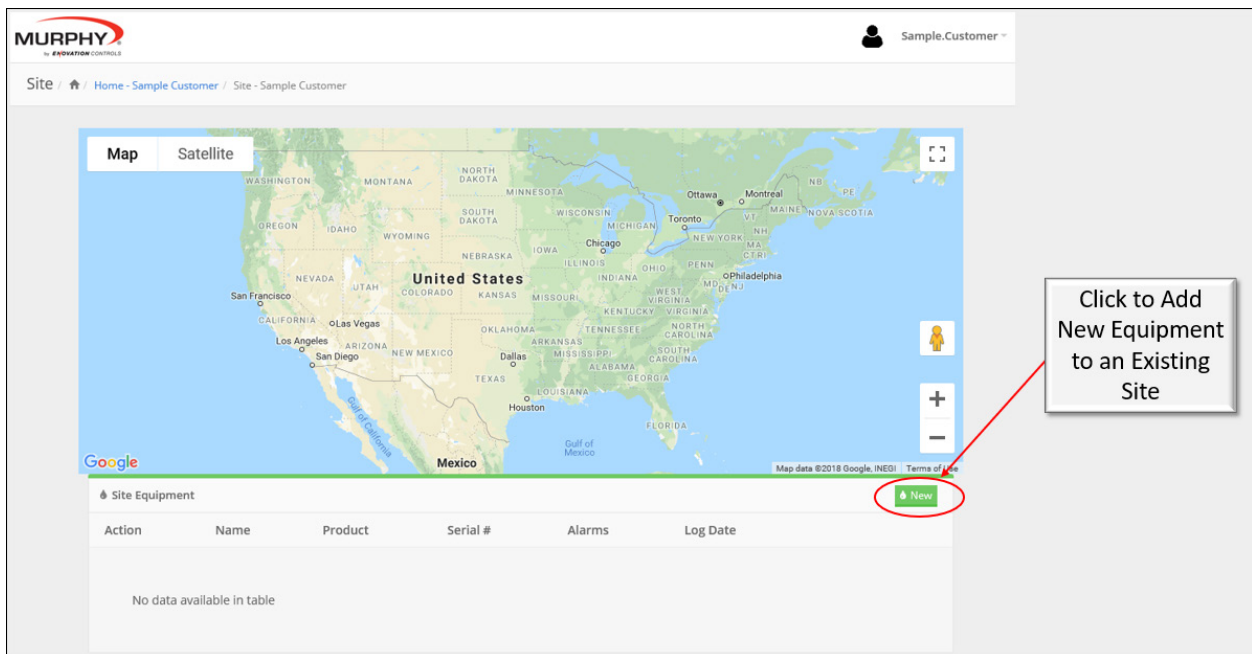

Once New is clicked a new page will open to enter the Equipment Name, Serial Number, IMEI, and Type of Equipment the device is being used with. Enter all the required information and click add to add a new piece of equipment to a site.


The screenshot shows a web application interface for adding new equipment. At the top left is the MURPHY logo with 'by ENOVATION CONTROLS' underneath. At the top right is a user profile icon and the text 'Sample.Customer'. Below the header is a breadcrumb trail: 'New Equipment / Home - Sample Customer / Site - Sample Customer / New Equipment'. The main content area features a form titled 'Add New Equipment'. The form contains four input fields: 'Equipment Name' with a placeholder 'Short description', 'Serial Number' with a placeholder 'Device serial number', 'IMEI' with a placeholder 'Device Imei', and 'Type' with a dropdown menu showing 'Choose equipment type'. A red 'Add Equipment' button is positioned below the form. At the bottom of the page, there is a copyright notice '© 2018 ENOVATION CONTROLS' and a small upward-pointing arrow icon.

## Moving Equipment


Under the Equipment Action category, the dropdown box allows users to edit, delete, or move the device from site to site.

- **Edit:** Selecting Edit will open the Equipment page and allow editing of the equipment.
- **Delete:** Only delete the equipment if the module is no longer in service. If the equipment is deleted it can be recovered by adding equipment back to a site as described above.
- **Move:** Selecting Move will allow moving the equipment from one site to another. This requires child sites to move equipment from a home to a child.

**Move:** Select Move from drop down under Action column.

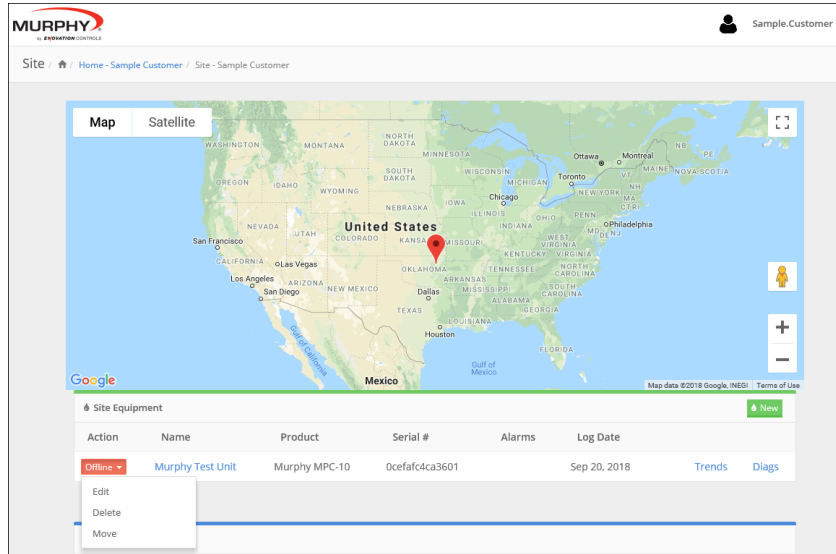


**Move:** Choose the Site the equipment is to be moved and press OK button.

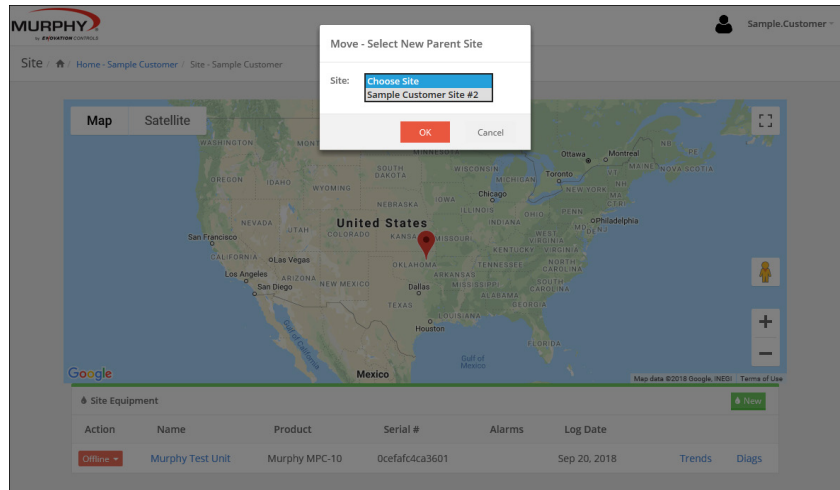


## Site Equipment

Site Equipment allows monitoring of the system as well as remote starts via Modbus with remote throttle setpoint changes. The equipment page allows a user to see the Device Location and set radius alerts, monitoring of the engine parameters, Remote Control for start/stop and throttling, Alerts, Device Information, Device Status (Trends), and Device Setup.


**Device Location:** This section shows the device location and allows an Admin level user to set a radius alert for the equipment. When the equipment is moved out of the established radius, it will send an alert notification to the personnel designated to receive alert notifications.

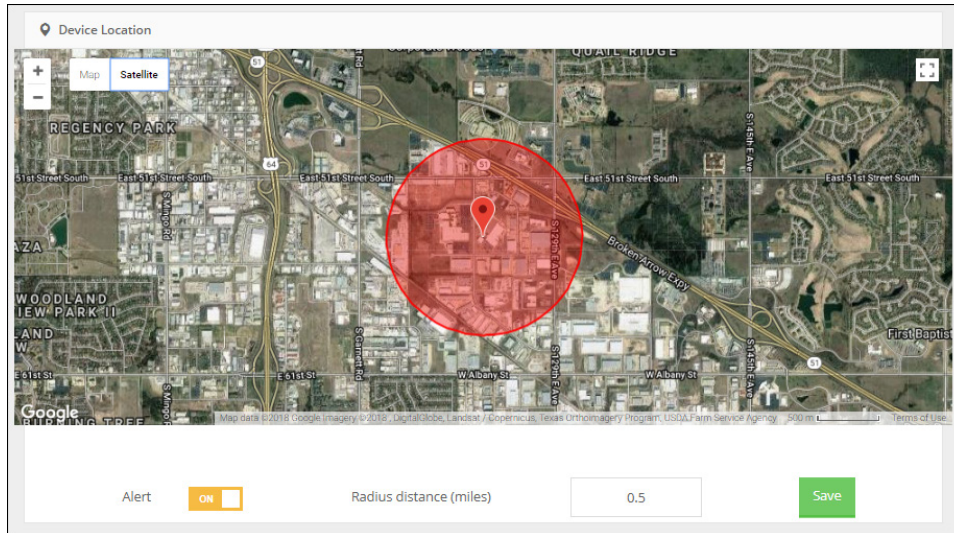


**Device Performance:** This section displays the Admin-allowed active parameters to be shown to all users in the EZ Setup section.

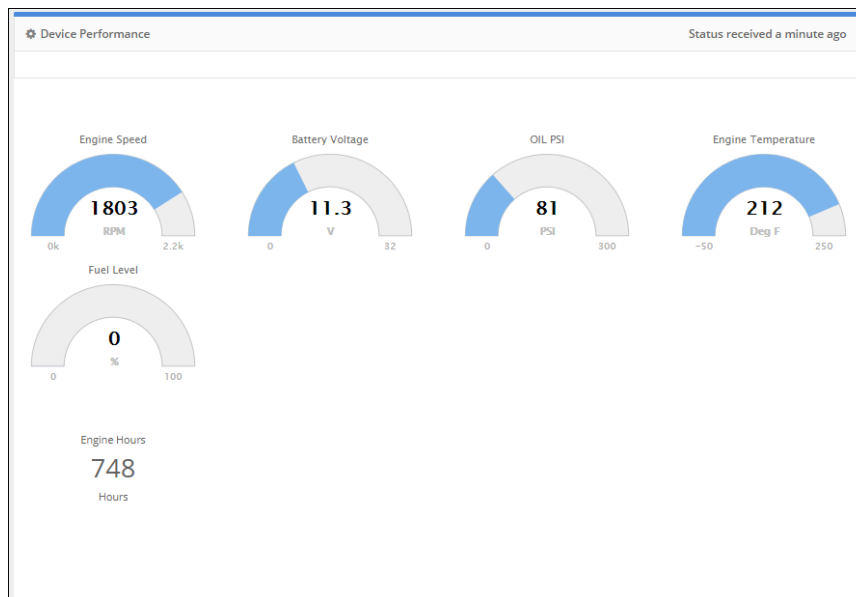


**Device Remote Control:** This section allows a user to place the PowerCore controller in the manual or auto mode of operation. This section also allows for remote Start/Stop and throttle control through Modbus to the controller.

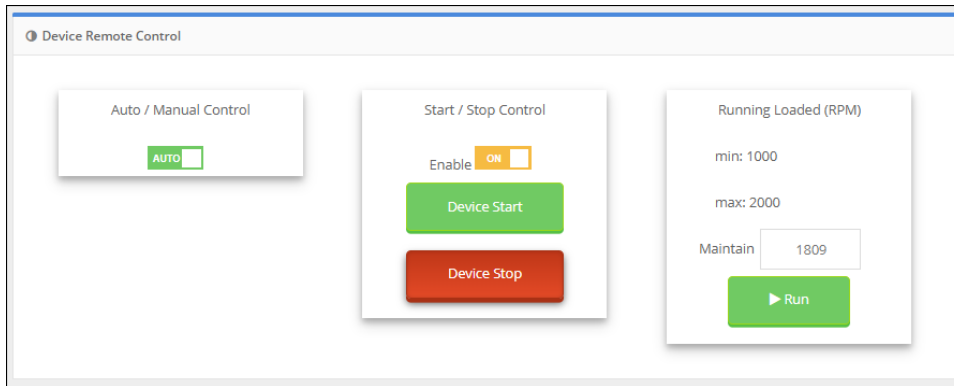

**Alerts:** This section provides any active and inactive alerts that have not been acknowledged and deleted.

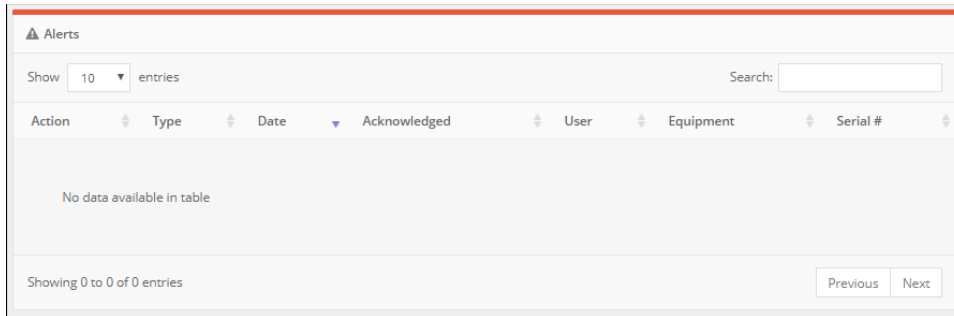


**Device Information:** This section allows the name change of the device, shows the controller the CONNECT device is used in conjunction with, the CONNECT serial number, the active state the controller is in, the auto start setting chosen in the controller, last log of the device, Device ID, CONNECT revision level, PowerCore Version Application and Configuration numbers, and number of alarms. This section also allows for the Admin to restart the CONNECT system, upgrade firmware of the CONNECT system, and Save Device Information for the Equipment.

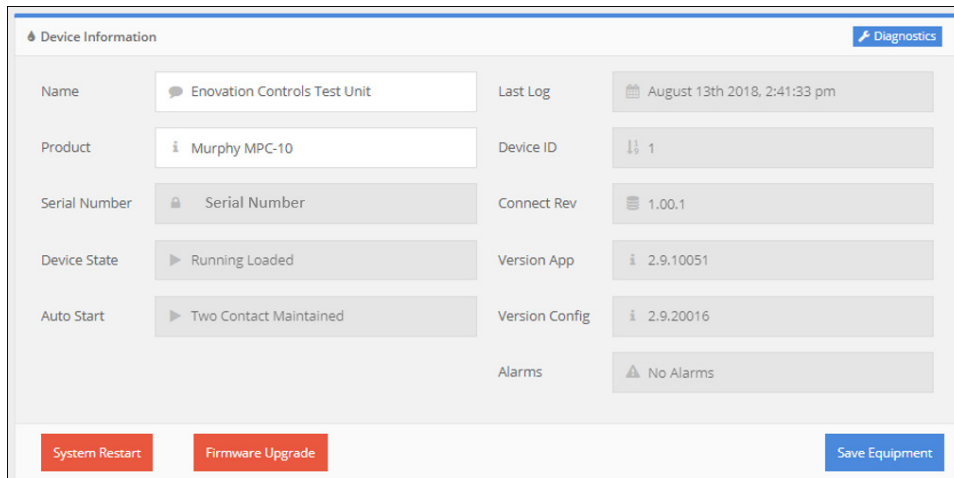



**Device Status:** This section provides the user with statistics from the last 24 hours up to the past 3 months of parameters shown above in Device Performance. There is also an option to run a custom timeframe and view Full Trends that can be zoomed into 5 minute intervals.

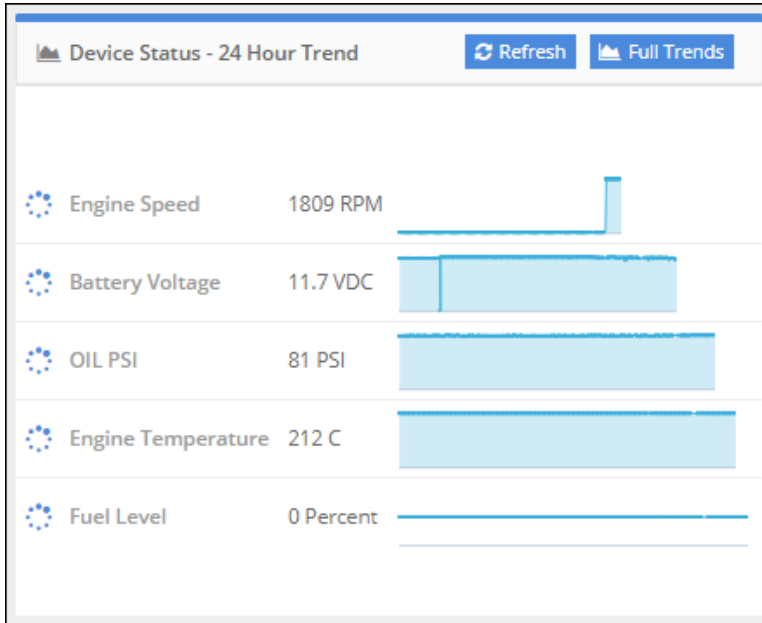

**Device Setup:** This section is only available for Admin level users. This section allows setting of the visual parameters on the equipment page, special alarming functions, remote start/stop type and throttling settings, and showing the viewable service reminders from the controller on the equipment page.


Created: August 13, 2018 2:24 PM

Executed: August 13, 2018 2:25 PM

Status: ✓ SUCCESS: Unit ID: 1 Serial: 0cefafc4ca3601 Setup ID: 5b71db096f0b6e3189c1bd4a Code: 0


Engine Maximum RPM	2000
Engine Minimum RPM	1000
Operating Mode	Running Loaded
Running Loaded Maintain Value	1800

- 1) **Device Setup Wizard (Equipment Configuration):** This section allows the admin to choose which device parameters are viewable on the equipment page for all users.

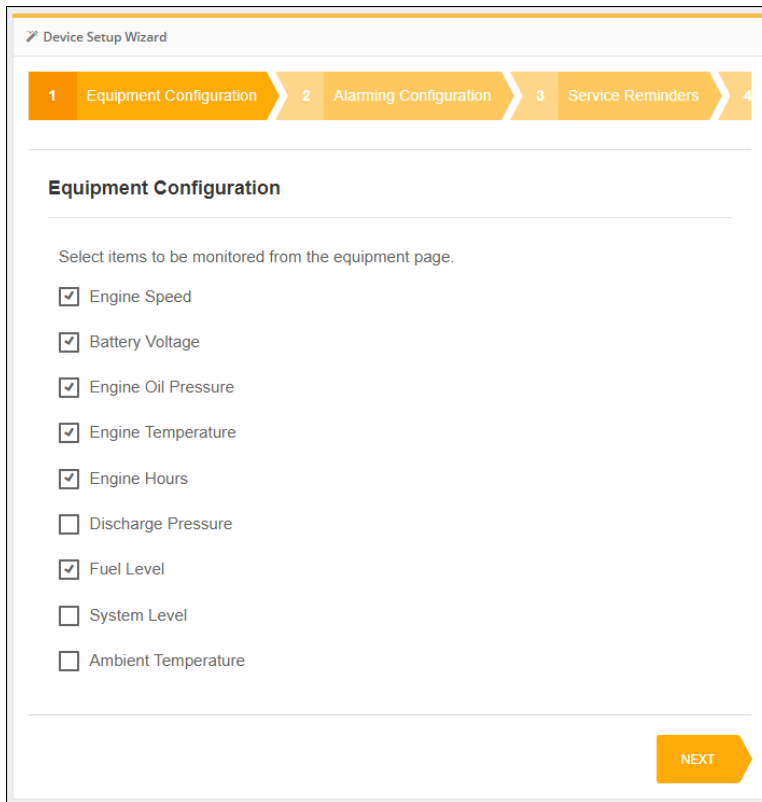

The screenshot shows the 'Device Setup Wizard' interface. At the top, there is a progress bar with four steps: 1. Equipment Configuration (highlighted in orange), 2. Alarming Configuration, 3. Service Reminders, and 4. (partially visible). Below the progress bar, the title 'Equipment Configuration' is displayed. The main content area contains the instruction 'Select items to be monitored from the equipment page.' followed by a list of nine items, each with a checkbox: Engine Speed (checked), Battery Voltage (checked), Engine Oil Pressure (checked), Engine Temperature (checked), Engine Hours (checked), Discharge Pressure (unchecked), Fuel Level (checked), System Level (unchecked), and Ambient Temperature (unchecked). At the bottom right, there is an orange 'NEXT' button.

- 2) **Device Setup Wizard (Tier 4 Equipment Configuration):** This section allows the admin to choose Tier 4 gauges to be shown in the device performance section and are viewable to all users with access to the equipment.

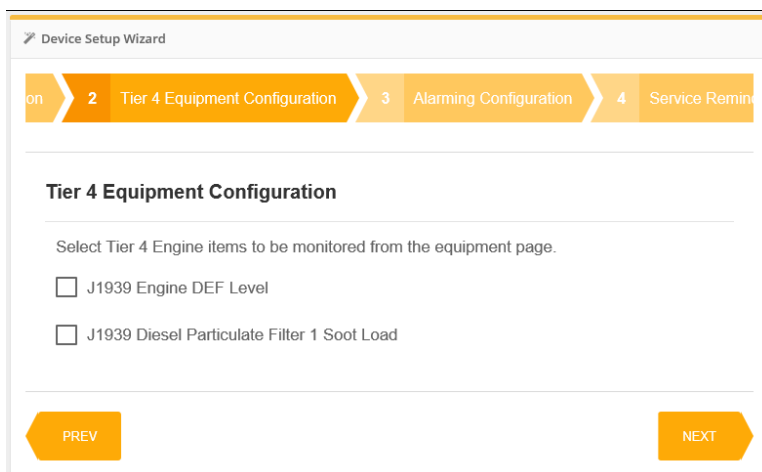

The screenshot shows the 'Device Setup Wizard' interface. At the top, there is a progress bar with four steps: 1. (partially visible), 2. Tier 4 Equipment Configuration (highlighted in orange), 3. Alarming Configuration, and 4. Service Reminders. Below the progress bar, the title 'Tier 4 Equipment Configuration' is displayed. The main content area contains the instruction 'Select Tier 4 Engine items to be monitored from the equipment page.' followed by a list of two items, each with a checkbox: J1939 Engine DEF Level (unchecked) and J1939 Diesel Particulate Filter 1 Soot Load (unchecked). At the bottom left, there is an orange 'PREV' button, and at the bottom right, there is an orange 'NEXT' button.

- 3) **Device Setup Wizard (Alarming Configuration):** This section allows the Admin to choose whether they would like an alert notification to be sent when the device goes offline and when the controller is taken out of the auto mode of operation.

The screenshot shows the 'Device Setup Wizard' interface. At the top, a progress bar indicates the current step is '3 Alarming Configuration', with previous steps '2' and '1' and subsequent steps '4 Service Reminders', '5 Control Selection', and '6' visible. Below the progress bar, the title 'Alarming Configuration' is displayed. Underneath, there is a sub-header 'Select additional unit warnings to be reported.' followed by two unchecked checkboxes: 'Device offline' and 'Manual mode operations'. At the bottom of the form, there are two orange buttons: 'PREV' on the left and 'NEXT' on the right.

- 4) **Device Setup Wizard (Service Reminders):** This section allows the Admin to select whether the Service Reminders from the PowerCore controller are to be shown on the Equipment page.

The screenshot shows the 'Device Setup Wizard' interface. At the top, a progress bar indicates the current step is '4 Service Reminders', with previous steps '3 Duration', '2', and '1' and subsequent steps '5 Control Selection', '6 Review', and '7 Save' visible. Below the progress bar, the title 'Service Reminders' is displayed. Underneath, there is a sub-header 'Enable optional unit service reminder statistics' followed by one unchecked checkbox: 'Enable service reminder display'. At the bottom of the form, there are two orange buttons: 'PREV' on the left and 'NEXT' on the right.

- 5) **Device Setup Wizard (Control Selection):** This section allows the Admin to remotely set minimum and maximum engine speeds, choose the Operating Mode for Auto Throttling of the system, and the maintain value and deadband values for pressure, level, or flow throttling methods.

The screenshot shows the 'Device Setup Wizard' interface. At the top, a progress bar indicates the current step is '5 Control Selection', with previous steps '4 Service Reminders' and '3 Duration' highlighted, and subsequent steps '6 Review' and '7 Save' shown as disabled. Below the progress bar, the 'Control Selection' section contains four input fields: 'Engine Maximum RPM' with a value of 2200, 'Engine Minimum RPM' with a value of 700, 'Operating Mode' with a dropdown menu set to 'Running Loaded', and 'Running Loaded Maintain Value' with a value of 1800. At the bottom of the screen, there are two orange buttons: 'PREV' on the left and 'NEXT' on the right.

- 6) **Device Setup Wizard (Review):** This section allows the Admin to review the changes in the Device Setup Wizard (EZ Setup) prior to saving or saving/writing to device.

The screenshot shows the 'Device Setup Wizard' interface in the 'Review' step. The progress bar at the top highlights step '6 Review', with '5 Control Selection' and '4 Service Reminders' also highlighted, and '3 Duration' and '7 Save' shown as disabled. Below the progress bar, the 'Review' section features a table with the heading 'Please review and verify the settings'. The table lists the settings and their values: Engine Maximum RPM (2200), Engine Minimum RPM (700), Operating Mode (Running Loaded), and Running Loaded Maintain Value (1800). At the bottom of the screen, there are two orange buttons: 'PREV' on the left and 'NEXT' on the right.

Setting	Value
Engine Maximum RPM	2200
Engine Minimum RPM	700
Operating Mode	Running Loaded
Running Loaded Maintain Value	1800

- 7) **Device Setup Wizard (Save):** This section allows the Admin to save settings only to the webpage or Save and Write Drive to save settings to the PowerCore controllers.

The screenshot shows the 'Device Setup Wizard' interface. At the top, a progress bar indicates seven steps: 1. Duration, 2. Service Reminders, 3. Control Selection, 4. Review, and 5. Save. The 'Save' step is currently active. Below the progress bar, the heading 'Save' is displayed. The main content area contains two options: 'Save Settings' (a blue button) and 'Save and Write' (a red button). A warning message is present: 'WARNING: This action will overwrite the current controller settings.' At the bottom of the wizard, there are two buttons: 'PREV' and 'FINISH'.

## Troubleshooting


Murphy CONNECT has Wi-Fi communications which allow for minor troubleshooting of the module. This section details how to log on and interpret the data.

To access the Wi-Fi for troubleshooting ensure the device has the appropriate power to the unit. When the unit is powered on the unit can be found by searching for a new Wi-Fi connection on the PC or smart device.

Wi-Fi Address: CONNECT\_XXXX (the XXXX represent the last 4 digits of the MAC address of the device connecting)

Password: Murphy (use Murphy only when required to login)

Once connected to the device Wi-Fi network, open the browser and type 192.168.6.1 into the URL address to access the modem's page (also shown on the CONNECT front label). The page should resemble the image below and allow one to see the items listed below for troubleshooting hardware and connectivity.

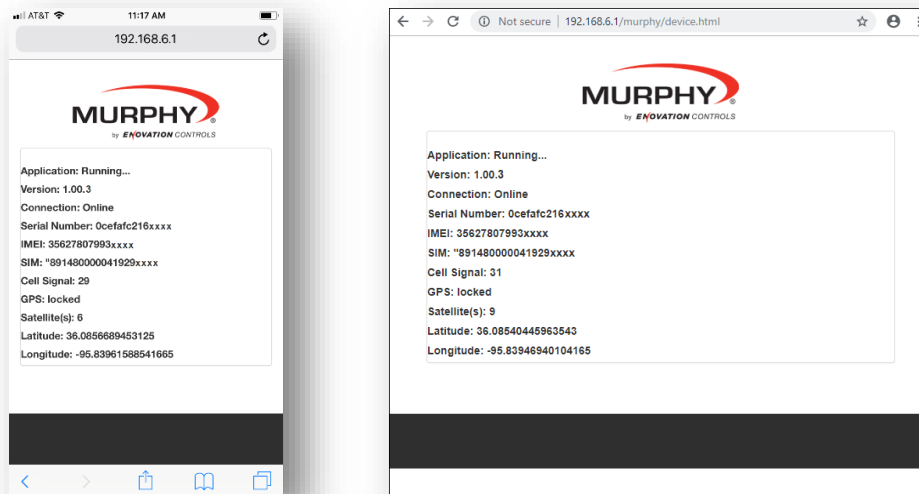

**Application:** States whether the application is running or not running. This should be running at this stage

**Version:** Version of the CONNECT device

**Connection:** States whether the device is connected to a cellular network

**Serial Number:** Provides Serial Number of device. (Used to register device if device is installed)

**IMEI:** Provides IMEI of device. (Used to register device if device is installed)

**SIM:** Provides SIM number.

**Cell Signal:** Provides range for cellular network. (0-6 = Poor, 7-15 = Okay, 15+ = Good)

**GPS:** States whether locked or not locked for GPS positioning.

**Satellites:** 1-2 will not allow a lock for GPS, 3+ allows locking for GPS location.

**Latitude:** Once GPS is locked, provides Latitude coordinates for last known location.

**Longitude:** Once GPS is locked, provides Longitude coordinates for last known location.

## Murphy CONNECT Specifications

### Power Supply

---

Operating Voltage: 9-36 VDC, reverse battery polarity protected

Max Voltage: -40 to +60 VDC

Power Consumption:

12 VDC: Transmitting: 265mA, Idle: 135mA, Off: 0.5mA (Using IGN to turn off),  
On: ~175mA Avg.

24 VDC: Transmitting: 135mA, Idle: 90mA, Off: 0.5mA (Using IGN to turn off),  
On: ~115mA Avg.

### Inputs/Outputs

---

(1) Digital, Shared (Future Use)

### Communications

---

(1) CAN: J1939 (Future Use)

(1) RS485: Modbus RTU

(1) Wi-Fi: 2.4GHz 802.11 b/gn (Troubleshooting)

(1) Cellular (LTE)

(1) GPS (Location Services)

### Connection

---

#### Connection:

8 Position: Amphenol AT06-08S

Antenna: SMA (Supplied 2 Wire Dual Cellular LTE and GPS)

#### Mating Connector:

8 Position: Amphenol AT04-08PA

Deutsch DT04-08PA

### Physical / Environmental

---

Enclosure Material: Polycarbonate

Dimensions (WxHxD): 5.06 x 7.56 x 1.55 in. (129 x 192 x 39 mm)

IP Rating: IP67

Operating & Storage Temperature: -30°C to +80°C (-22°F to +176°F)

Vibration: 8.17 Grms (5-2000 Hz), 3-axes random

(Vibration specification was met without the use of rubber isolation mounts)

Shock: ±25G, 3 axes

(Vibration specification was met without the use of rubber isolation mounts)

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC, with all rights reserved. (c) 2018 Enovation Controls, LLC. A copy of the warranty may be viewed or printed by going to [www.enovationcontrols.com/warranty](http://www.enovationcontrols.com/warranty)

**ENOVATION CONTROLS CORPORATE HEADQUARTERS**  
5311 S 122ND EAST AVENUE  
TULSA, OK 74146

**ENOVATION CONTROLS LTD. – UNITED KINGDOM**  
CHURCH ROAD LAVERSTOCK  
SALISBURY SP1 1QZ UK

**SUN MURPHY INTERNATIONAL TRADING (SHANGHAI) CO., LTD**  
B15 ROOM, 6# BUILDING, 351 SIZHUAN ROAD  
SONGJIANG DISTRICT, SHANGHAI 201601, CHINA

**ENOVATION CONTROLS INDIA PVT. LTD.**  
301, 3RD FLOOR, KRISNA CHAMBERS,  
11 GALAXY GARDENS, NORTH MAIN ROAD,  
KOREGAON PARK, PUNE 411001,  
MAHARASHTRA, INDIA

**U.S. SALES & SUPPORT**

PHONE: 918 317 4100  
EMAIL: [SALES@ENOVATIONCONTROLS.COM](mailto:SALES@ENOVATIONCONTROLS.COM)  
[WWW.ENOVATIONCONTROLS.COM](http://WWW.ENOVATIONCONTROLS.COM)

**MURPHY INDUSTRIAL PANEL DIVISION**  
PHONE: 918 317 4100  
EMAIL: [IPDSALES@ENOVATIONCONTROLS.COM](mailto:IPDSALES@ENOVATIONCONTROLS.COM)

**INTERNATIONAL SALES & SUPPORT**

**EUROPE, MIDDLE EAST, AFRICA**  
PHONE: +44 1722 410055  
EMAIL: [SALES@ENOVATIONCONTROLS.EU](mailto:SALES@ENOVATIONCONTROLS.EU)

**CHINA**  
PHONE: +86 21 6237 5885  
EMAIL: [APSALES@ENOVATIONCONTROLS.COM](mailto:APSALES@ENOVATIONCONTROLS.COM)

**INDIA**  
PHONE: +91 91581 37633  
EMAIL: [INDIASALES@ENOVATIONCONTROLS.COM](mailto:INDIASALES@ENOVATIONCONTROLS.COM)



FM 28221 (Tulsa, OK - USA)  
FM 28422 (UK)