


Using Aquastar Display Software

- 1) Install Aquastar Display Software – if the file was emailed it may have been renamed to let it past the email filters. Rename it to .zip then extract all the files and run setup.exe. If it was downloaded from the web site then you just need to extract the files and run setup.exe.
- 2) Make sure you have the latest E-Com driver installed to allow the download cable to work. Go to this link for the latest driver:
http://www.cancapture.com/downloads/cat_view/17-ecom-resources.html
- 3) Plug the E-Com cable into the engines diagnostic port connector and turn the boats ignition power on to get the Zero Off turned on.
- 4) Start the Aquastar Display program
- 5) Copy the password emailed to you and use the “Paste Password” button to load it in the display software.
- 6) Select the “single password” check box.
- 7) Type in the Zero Off’s serial number


The screenshot shows a dialog box titled "Enter Password". It features a blue header bar with the title and a close button. The main content area is grey and includes a password input field with four asterisks, a "Clear Password" button, a "Paste Password" button, a checked checkbox for "Single Serial Number Access", a "Serial Number" input field containing the value "10032", an unchecked checkbox for "Save password and S/N", and "OK" and "Quit" buttons at the bottom.

- 8) Click Ok to go to the next screen, if the password does not match the serial number then the program will close.
- 9) Establishing communications – the program will automatically scan all ports to find the Zero Off. Once communication is established you will see the model number and serial number of your Zero Off. Make sure it matches the information sent in the request. The status box at the top indicates communication status.


Not Connected

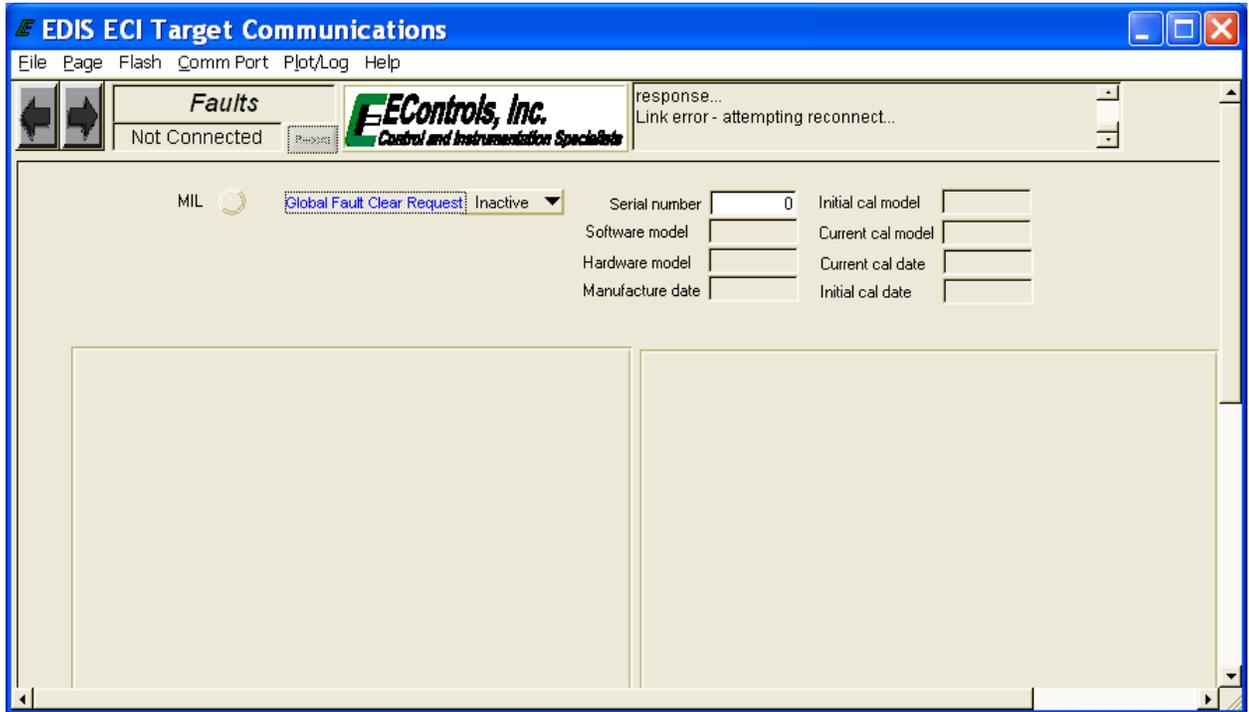

Connected

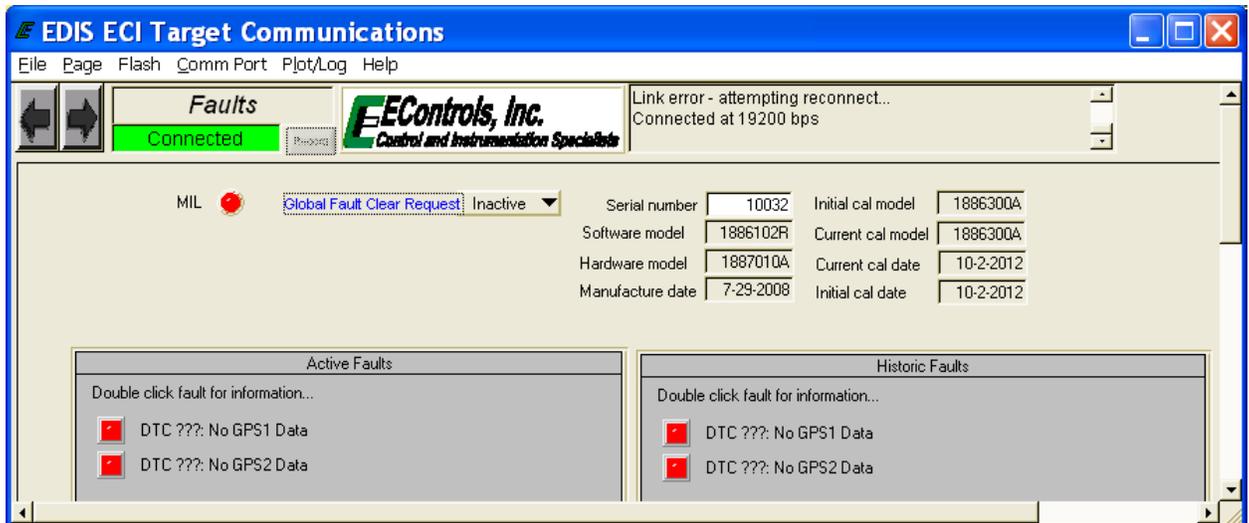

- 10) Reprogram target – from file menu select “Reprogram Target”. A file selection box will appear, select the .mot file that was emailed to you. The display will blank out during reprogramming, do not remove power during this phase. The software model box will update to show the current software revision once complete.

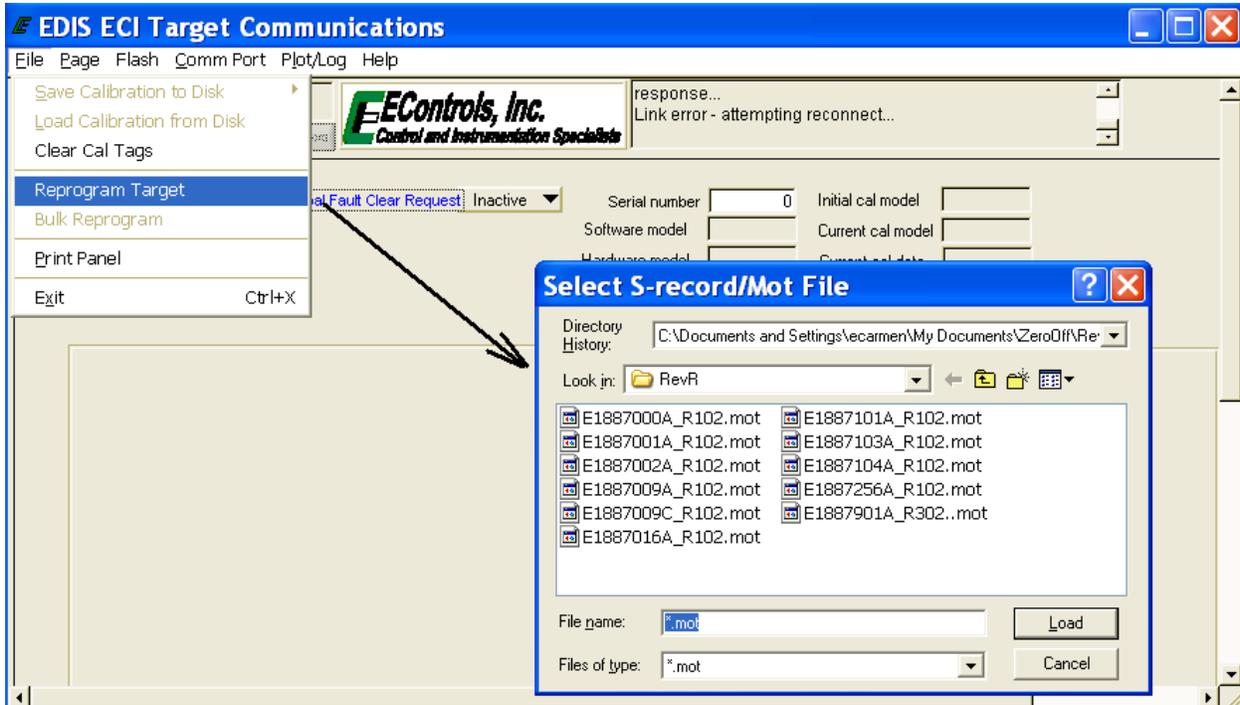

- 11) Turn ignition power off and disconnect the cable.
- 12) Turn power back on and verify Zero Off is operating properly.