

See "Start / Stop Note" below for your application

See "Start / Stop Note" below for your application

To A Good Engine Ground


**Notes:**

- Factory Recommends Using 14 AWG Stranded Wire
- Place Suppression Diodes Across All Inductive Loads. Also, Route AC Wiring Away From DC Control Wires
- \* For Pilot Duty Only. External Load Not to Exceed 300 Ma. Transistor Output, Closes To Ground.
- \*\* For Pilot Duty Only. External Load Not to Exceed 5 Amps. Relay Output, Closes To Battery (+).

Murphy Switch of California, Inc.  
**murphy**™ Switch 41343 12th Street West, Palmdale, CA 93551  
 661-272-4700 Fax: 661-974-7570

REV:	TITLE:		
	Typical Wiring for ASM200 OSX and OAX Model Engine Automatic Controllers.		
	DRAWING NO.	STD-OAX/OSX	
DRAWN:	DATE:	SCALE:	FILE NAME:
RJM	07-93	NONE	STD-OAX.VSD

**Start / Stop Type Note**

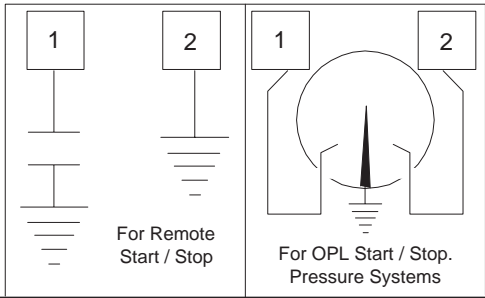

For Remote Start / Stop

For OPL Start / Stop. Pressure Systems