

FuelCAN FLC300

Fuel sender to J1939 CAN bus interface

00-02-0663
revision B, 20th August 2015
section 78



Installation Instructions

Please read the following information before installing. A visual inspection of this product for damage during shipping is recommended before installation. It is your responsibility to ensure that qualified mechanical and electrical technicians install this product. If in doubt, please contact your local Murphy representative.

General Information



BEFORE BEGINNING INSTALLATION OF THIS PRODUCT

- ✓ Disconnect all electrical power to the machine
- ✓ Make sure the machine cannot operate during installation
- ✓ Follow all safety warnings of the machine manufacturer
- ✓ Read and follow all installation instructions

FuelCAN is a compact interface for translating an analog fuel level sender signal into digital SAE J1939 CAN bus data. The device allows integration of standard fuel level senders into modern ECU-based engine instrument and control systems.

FuelCAN modules have three inputs (only one of which is connected at any one time): input 1 is configured for use with Murphy ES series resistive fuel level senders; inputs 2 and 3 can be used with fuel level senders having compatible resistance ranges.

	fuel level / approx. resistance, Ohms				
	empty	1/4	1/2	3/4	full
Input 1 (Murphy)	240	147	96	60	33.5
Input 2	240	158	100	58	30
Input 3	10	56	95	138	180

FuelCAN inputs can also be factory-configured for use with non-standard fuel level or resistive senders. Please note that minimum order quantities apply for custom solutions.

A rear-facing LED indicates input and CAN bus status. FuelCAN is compact and light enough to be incorporated into wiring harnesses, but can also be surface mounted via four case holes. The polycarbonate case is fully sealed in epoxy resin for high-impact and environmental resistance.

These instructions relate to Murphy part numbers E2502000 and E2502100. FuelCAN modules with other stock codes may include modified input scaling or CAN bus/J1939 data parameters.



Specifications

Power supply

Operating voltage, steady state: 7 to 35 VDC
Current consumption: 25mA (typ.)

Inputs

Maximum operating range: -2 to +35 VDC
Input 1 sender range, Ohms: 240 (empty) to 33.5 (full)
Input 2 sender range, Ohms: 240 (empty) to 30 (full)
Input 3 sender range, Ohms: 10 (empty) to 180 (full)

Output CAN bus:

SAE J1939 protocol, PGN65276 (00FEFC₁₆), 2 sec update rate.
Source address: 0xA0
120 Ohm terminating resistor fitted.


Physical

Case material: high-impact ABS, epoxy-filled
Dimensions: see diagram below
Weight: approx 60g / 0.13 lb
Operating temperature: -20 to +85°C / -4 to +185 °F
Environmental sealing: IP65, exposed lead ends
Electromagnetic compatibility: 2004/108/EC

Connection and Dimensions

(standard FLC300 shown)

Dimensions in mm (in.) for reference only. Use actual product for template.

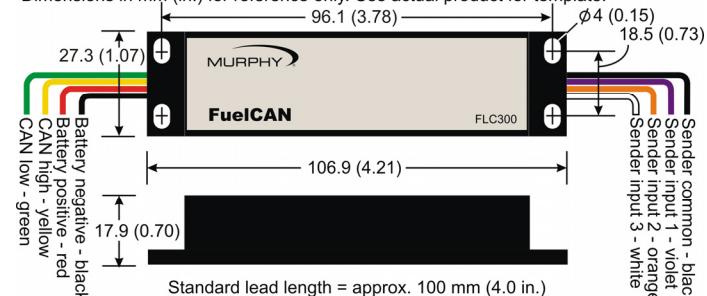

Electrical Connection & Mounting

Electrical Connection

FuelCAN connection is via 8 color-coded flying leads (see diagram on page 1).

RED: Power supply positive DC

BLACK: Power supply negative DC

Connect these wires to a smooth DC power supply in the range of 7 to 35 VDC. A 1-Amp anti-surge fuse is recommended in the positive DC line.

FuelCAN operates with negative earth/ground or fully insulated DC systems. **DO NOT** use FuelCAN with positive earth/ground systems.

YELLOW: CAN bus high

GREEN: CAN bus low

Connect these wires to the engine's CAN bus, using the appropriate twisted-pair cable to J1939 specification. FuelCAN includes a non-removable 120 Ohm terminating resistor.

BLACK: Sender common (negative DC)

VIOLET: Sender input 1 (Murphy)

ORANGE: Sender input 2

WHITE: Sender input 3

For best measurement accuracy, use an insulated return (2-wire) resistive fuel level sender, e.g., (for input 1) Murphy ES2F series. Connect one sender terminal to the appropriate FuelCAN input lead (1, 2 or 3); connect the other sender terminal to FuelCAN's Sender Common (black) wire.

Where a 1-wire (negative DC/ground return) sender is used, connect the black (sender common) wire to battery negative.

Mounting

FuelCAN uses an epoxy resin-filled polycarbonate case for high-impact and environmental resistance. The case is compact and light enough for inclusion in (or tie-wrapping to) an engine wiring harness; or, using the actual product as a template, FuelCAN can be surface-mounted via four M4 (0.15 in) holes (see diagram on page 1 for approximate dimensions). The case is sealed to IP65; the exposed flying leads must use connectors appropriate for the environmental sealing required.

Operation and Maintenance

Operation

At each power-up, FuelCAN checks all three inputs for an in-range sender resistance. If more than one sender is connected at power-up, FuelCAN prioritizes input selection in the order 1 (Murphy), 2 then 3.

Once FuelCAN has selected a valid input, it continues to use that input until the DC power supply is cycled. FuelCAN transmits fuel level data every 2 seconds. Data specification is otherwise as SAE J1939-71:

PGN	65276 (00FEFC ₁₆)
Message data length	8 bytes
Relevant byte	#2 (fuel level)
Data page	0
PDU format	254
PDU specific	252
Resolution	0.4%/bit gain, 0% offset
Data range	0 to 100%

If a sender failure (short or open circuit) occurs during operation, FuelCAN transmits fuel level data of the value 0xFE₁₆ (indicating measurement error).

If no valid sender is detected at power-up, FuelCAN transmits a value of 0xFF₁₆ (indicating measurement not available) and flashes its LED in a heartbeat pattern (two short pulses, followed by a longer pause). J1939 message PGN65275 also includes bytes for other parameters, including washer fluid level (byte #1), fuel filter differential pressure (byte #3), engine oil filter differential pressure

(byte #4) and cargo ambient temperature (bytes #5/6). For each of these parameters, FuelCAN transmits a value of 0xFF₁₆ (indicating measurement not available).

LED operation is as follows:-

LED pattern	Status
Off	Power off
Flashing ('heartbeat' pulse on)	Power on, but all inputs open circuit (valid sender not detected).
Flashing (50/50% on/off)	Power on, valid sender input, but no CAN activity.
On	Power on, valid sender input and CAN activity

Maintenance and Warranty

FuelCAN contains no user-serviceable parts. Maintenance is therefore limited to the following preventative checks:

- Check that FuelCAN electrical connections are secure.
- Check that the case is mounted securely, with vibration and environmental exposure minimized where possible. The case may be wiped with a clean, damp cloth. Do not use cleaning solvents.

FuelCAN is supplied with a two year warranty on parts and workmanship. In the event of a fault or technical query, and before returning equipment, please contact your Murphy representative for technical support.

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC, with all rights reserved. (c) 2015 Enovation Controls, LLC. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/warranty.

ENOVATION CONTROLS CORPORATE HEADQUARTERS
5311 S 122ND EAST AVENUE
TULSA, OK 74146

ENOVATION CONTROLS – SAN ANTONIO OFFICE
5757 FARINON DRIVE
SAN ANTONIO, TX 78249

ENOVATION CONTROLS – HOUSTON OFFICE
105 RANDON DYER RD
ROSENBERG, TX 77471

ENOVATION CONTROLS LTD. – UNITED KINGDOM
CHURCH ROAD LAINESFIELD
SALISBURY SP1 1OZ UK

MURPHY CONTROLS TECHNOLOGIES (HANGZHOU) CO, LTD.
77 23RD STREET
HANGZHOU ECONOMIC & TECHNOLOGICAL DEVELOPMENT AREA
HANGZHOU, ZHEJIANG 310018 CHINA

DOMESTIC SALES & SUPPORT

ECONTROLS PRODUCTS
PHONE: +21 495 9772
FAX: +21 495 9791
EMAIL: INFO@ECONTROLS.COM
WWW.ECONTROLS.COM

MURPHY PRODUCTS
PHONE: 918 317 4100
FAX: 918 317 4100
EMAIL: SALES@FWMURPHY.COM
WWW.FWMURPHY.COM

MURPHY CONTROL SYSTEMS & SERVICES
PHONE: 281 633 4500
FAX: 281 633 4500
EMAIL: CSS-SALES@FWMURPHY.COM

MURPHY INDUSTRIAL PANEL DIVISION
PHONE: 918 317 4100
FAX: 918 317 4124
EMAIL: IPDSALES@FWMURPHY.COM

INTERNATIONAL SALES & SUPPORT

UNITED KINGDOM
PHONE: +44 1722 410055
FAX: +44 1722 410088
EMAIL: SALLES@FWMURPHY.CO.UK
WWW.FWMURPHY.CO.UK

CHINA
PHONE: +86 21 6237 5885
FAX: +86 21 6237 5887
EMAIL: APSALES@FWMURPHY.COM

LATIN AMERICA & CARIBBEAN
PHONE: 918 317 2500
EMAIL: LALES@FWMURPHY.COM

SOUTH KOREA
PHONE: +82 70 951 4100
EMAIL: SKOREASLES@FWMURPHY.COM

INDIA
PHONE: +91 1581 37633
EMAIL: INDIASALES@FWMURPHY.COM



FM 29212 (Tulsa, OK - USA)

FM 230657 (San Antonio, TX - USA)

FM 28221 (Rosenberg, TX - USA)

FM 29422 (UK)



FM 523851 (China)

TS 16949 (Automotive Quality Management System)

TS 589322 (China)

Printed in the USA